

Connecting the A-88 to an iPad

Before you continue, please make sure to access the following URL and check the operating requirements and other relevant information.

<http://www.roland.com/support/>

NOTE

- The first-generation iPad cannot be used.
- The iPad app you're using must support CoreMIDI.


You'll need to provide the following items

- iPad (made by the Apple Inc.)
- Apple iPad Camera Connection Kit (Camera Connector; made by the Apple Inc.)
- USB cable (included with the A-88)

Using the A-88 with an iPad

When using the A-88 with an iPad, switch the USB driver used by the A-88 to "GENERIC."

Use the following procedure to make this setting.

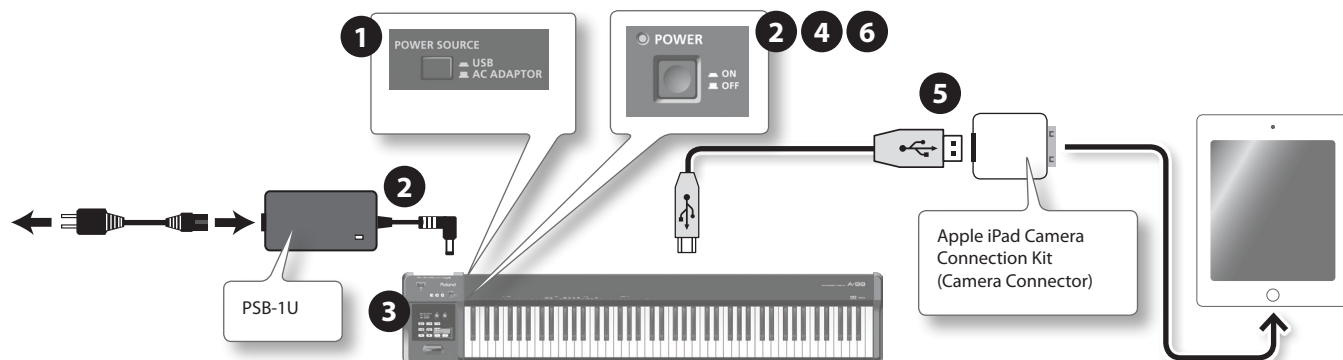

1. Set the [POWER SOURCE] switch to "AC ADAPTOR."
2. Connect the AC adaptor, and turn on the power of the A-88.
3. Press the [FUNCTION] button → [ADV] key (keyboard) → [-] button, in that order.
4. Turn off the power of the A-88.
5. Connect the A-88 to the iPad using the Camera Connector of the Apple iPad Camera Connection Kit.
6. Turn on the power of the A-88.

MEMO

- It will not be necessary to switch the USB driver the next time you use the A-88 while connected to the iPad. You only need to perform steps 1, 5, and 6.
- In order to use the A-88 connected with your iPad, the A-88's [POWER SOURCE] switch must be set to "AC ADAPTOR."



Using the A-88 with a Computer

If you want to use the A-88 while it's connected to a computer after having previously connected it to an iPad, you must switch the USB driver used by the A-88 to "ADVANCED."



1. Connect the A-88 to your computer, and turn on the power of the A-88.
2. Press the [FUNCTION] button → [ADV] key (keyboard) → [+] button, in that order.
3. Turn the power of the A-88 off and then on again.

MEMO

- If you're connecting the A-88 to a computer in which the USB driver has not been installed, disconnect the USB cable from the A-88, and install the USB driver in the computer as described in the section "Driver Installation" in the owner's manual for the A-88.
- It will not be necessary to switch the USB driver the next time you connect the A-88 to the computer. Simply connect the A-88 to the computer and it will be ready for use.