

Addendum

The following functions were added in BK-3 starting from version 1.04.

Contents

New Function to Recall and Edit Performances	1
Drum Kits	3

Check the version

If your BK-3 version is earlier than 1.04, download the update from the support page (<http://www.roland.com/support/>) → Downloads → product name (BK-3) → BK-3 System Program Version 1.04, and update your BK-3.

* If this addendum was included with the BK-3 you purchased, your instrument has already been updated to version 1.04 or later; you do not need to update.

How to check the version

Press [MENU] button → “Global” → “Utility” → “Version Info”


New Function to Recall and Edit Performances

Recalling Performance Memories in Adjacent Positions

The selection procedure described here may come in handy when all Performance settings you need for a given song are located in adjacent memories and when you need to be able to switch quickly between them..


1. Load the required Performance / Music Assistant List.

For details see “Loading a Performance/ Music Assistant/ Factory Songs’ List” in the BK-3 owner’s manual.

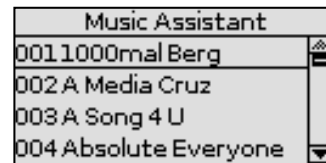


In the example above, we loaded the “Music Assistant” List.

2. Press and hold the [NUMERIC] button. The button lights.

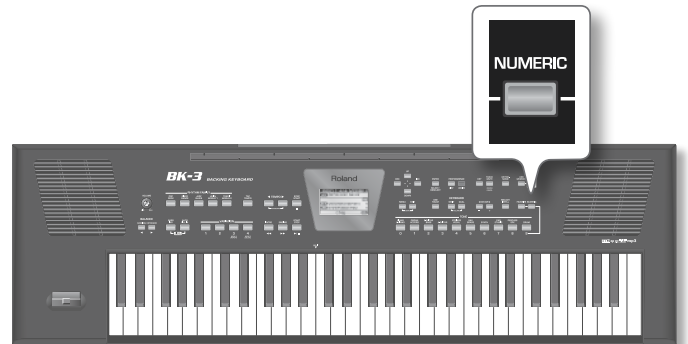

The Performance List page changes to:

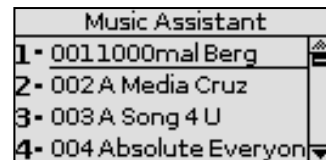

The TONE [1]~[4] buttons flash. To the left of each memory entry, a number is shown. This number corresponds to the TONE button [1]~[4] that you need to press to recall the assigned Performance memory.

NOTE

Please bear in mind that these assignments change when you edit the Performance List in question using “Delete Performance”, “Move Performance” or “Copy Performance”.

The TONE [0] and [5] buttons, on the other hand, light steadily because they are used to scroll through the list in steps of 4 memories. Pressing [5] while the above page is shown, for instance, will display Performance memories 5~8, which are again assigned to the TONE [1]~[4] buttons.


New Function to Recall and Edit Performances

3. Press the TONE [1]~[4] button that is assigned to the Performance memory you need.



The assigned Performance memory is recalled and shown in reverse in the display.

4. Press the TONE [5] button to select the next group of four performances. Alternatively, press the TONE [0] button to select the previous group of four performances.

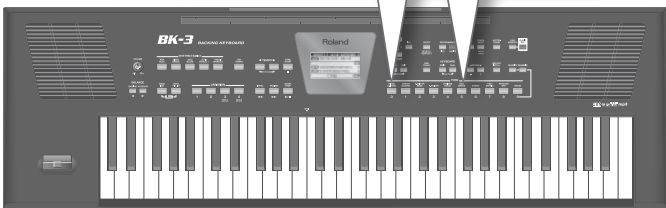

The display shows either the next (TONE [5]) or the previous (TONE [0]) set of 4 Performance memories.



In the example above we pressed the TONE button [5].

5. Repeat the steps (3) and (4) above to recall other Performance memories when you need them.
6. Press and hold the [NUMERIC] button again to exit from this type of selection.
Press the [EXIT] button to leave the list page without exiting from this type of selection.

Drum Kits

The followings Drum Kit was added:

		IndoMix 1	IndoMix 2	IndoMix 3	IndoMix 4
0	C-1	Elec Kick 2	HipHop Kick1	Pop Cymbal2	Applause 1
1	C#-1	Elec Kick 1	Jazz Kick 1	Pop Ride1	Train
2	D-1	CR78 Kick 1	Mex Kick	R&B Snare	Helicopter
3	D#-1	CR78 Kick 2	Timpani	R&B Clap	Gun Shot
4	E-1	TR-606 Kick1	Timpani	Techno Snare	Machine Gun
5	F-1	TR-707 Kick1	Timpani	House Snare	Explosion
6	F#-1	808 Kick	Timpani	Jungle Snare	HorseGallop
7	G-1	TR-808 Kick	Timpani	Ps Snare	Bird 1
8	G#-1	808 BassDrum	Timpani	909 Snare	Rain
9	A-1	TR-909 Kick	Timpani	909Snare2	Thunder
10	Bb-1	Dance Kick 2	Timpani	909 Kick 3	Applause 2
11	B-1	909Comp Kick	Timpani	House Kick	Timpani
12	C0	TR-909 Kick2	Timpani	TR-808 Kick	Timpani
13	C#0	HipHop Kick2	Timpani	909 Kick	Timpani
14	D0	BassDrumSet	Timpani	909 Kick2	Timpani
15	D#0	TechnoKick1	Timpani	TR-909 OHHsh	Timpani
16	E0	Dol4	Synth Drum 2	TR-909 OHH	Timpani
17	F0	Dance Snare1	Synth Drum 2	Ah	Con.Cymbal2
18	F#0	GondangAlToba	St Snare2	Ha	Concert Cym.
19	G0	Elec Snare 1	Synth Drum 2	ShutHa	Agogo 2 Hi
20	G#0	Dance Snare2	NewJzSn1	ShutHi	Asian Gong 2
21	A0	Elec Snare 2	Synth Drum 2	One	Kane
22	Bb0	MamboCowBell	RockSnare2_2	Two	Gamelan gong
23	B0	CowBell	Synth Drum 2	Three	HipHop BD1
24	C1	Claves	Rm Kick 2	Four	HipHop BD2
25	C#1	Woodblock1	Snare Ghost1	SnareFlam	SnareGhost1
26	D1	Dol2	Rm Snare 2	FingerSnaps2	Rap Snare
27	D#1	Dol3	FingerSnaps2	High-Q	Dance Snare2
28	E1	GonTaput4	Rm Snare 1	Slap	909 Snare 1
29	F1	GonTaput5	Room Tom 5	Scrtch Push2	TR-707 HH-c
30	F#1	GonTaput6	Room Tom 5	Scrtch Pull2	NewJzKik
31	G1	Sticks	Room Tom 2	Synth Drum 2	NewJzSn1
32	G#1	Congas_SW	TR707 Hihat C	Synth Drum 2	NewJzTomLo
33	A1	Congas_SW2	Room Tom 2	Synth Drum 2	NewRkTomMid
34	Bb1	Congas_SW4	ConcertKick	Synth Drum 2	NewJzTomHi
35	B1	808 BassDrum	HipHop Kick2	HipHop Kick	PopKick_PL
36	C2	TR-808 Kick	TR-909 Kick2	SimpleKick	TR-707 BD
37	C#2	808 Rimshot	Side Stick	Side Stick	TR-707 Rim
38	D2	808 Snare 1	House Snare	St Snare2	PopSnareL
39	D#2	GdgTaputRim	909 HandClap	707 Claps	PopSnrGhst
40	E2	TR-808Snare2	Elec Snare 2	St Snare1	PopSnareR
41	F2	808 Tom 2	808 Tom 2	85St Tom16	PopFlrTmFl
42	F#2	TR-808HiHatC	TR-808HiHatC	HipHopCHH	PopHiHat_U
43	G2	808 Tom 2	808 Tom 2	85St Tom16	PopFloorTm
44	G#2	808 HiHat Cl	JazzClosedHH	HipHopCHH	PopHiHat_S
45	A2	808 Tom 2	808 Tom 2	85St Tom12	RockTom2Fl
46	Bb2	TR-808HiHatO	JazzOpenHH	HipHopOHH	PopHHatOpen1
47	B2	808 Tom 2	808 Tom 2	85St Tom12	PopTom2
48	C3	808 Tom 2	808 Tom 2	85St Tom10	RockTom1Fl
49	C#3	808 Crash	808 Crash	85St CrsCym1	PopCrash
50	D3	808 Tom 2	Bend tlk_drm	85St Tom10	PopTom1
51	D#3	606 Ride Cym	Tabla Ge Hi	85St RdCym	PopRide
52	E3	ChinaCymbal	Tabla_Tun	ChinaCymbal	RockCrash1
53	F3	Ride Bell	Tabla_Na	85St RdBell	PopRideBl
54	F#3	Tambourine	Tambourine	Tambourine	Tambourine
55	G3	Splash Cym.	Bongo2_SW2	Splash Cym.	RockSplash
56	G#3	808 Cowbell	808 Cowbell	Cowbell	CowBell
57	A3	909 Crash	909 Crash	Crash Cymb2	RockCrash2

		IndoMix 1	IndoMix 2	IndoMix 3	IndoMix 4
58	Bb3	Vibraslap	Pop Kick 36	Vibraslap	Vibraslap
59	B3	Ride Cymbal	PopSnare38 1	Ride Cymbal	RockRide1
60	C4	CR78 HiBongo	Bongo High	NewHighBongo	Conga Hi Mt
61	C#4	CR78 LoBongo	CR78 LoBongo	NewLowBongo	Conga Lo Mt
62	D4	808 Conga	808 Conga	NewCongaSlap	Conga Slap
63	D#4	808 Conga	NewCongaOp	NewCongaOpen	Conga Hi Op
64	E4	808 Conga	NewLoConga	NewLowConga	CongaLoOp f
65	F4	Timbal Hi	High Timbale	High Timbale	CongaLoOp mf
66	F#4	Timbal Lo	Bongo_SW_P1	Low Timbale	Bongo 1 Hi
67	G4	Agogo	Bongo_SW_P2	Agogo	BongoLoOp f
68	G#4	Agogo	Bongo_SW_P3	Agogo	808cowbe
69	A4	Cabasa	Bongo_SW_P4	Cabasa	NewShaker2
70	Bb4	808 Maracas	808 Maracas	Maracas	808marac
71	B4	GongToba1	Gamelan Gong	Bongo1_SW1	Cabasa
72	C5	GongToba2	LongWhistle	Bongo1_SW3	Dhol 2
73	C#5	Short Guiro	Quide1	Short Guiro	Dholak 1
74	D5	CR78 Guiro	Quide2	Long Guiro	Dholak 2
75	D#5	808 Clave	Claves	Claves	Dholak 3
76	E5	Woodblock	Woodblock	Woodblock	Dholak 4
77	F5	Woodblock	Bongo1_SW3	Woodblock	Dholak 5
78	F#5	Bongo_SW	Mute Cuica	CR78 HiBongo	Dholak 7
79	G5	Bongo2_SW2	Congas_8_P1	CR78 LoBongo	Dholak 8
80	G#5	MuteTriangl	CongaLoOpen_P1	MuteTriangl	Dholak 9
81	A5	OpenTriangl	CongaLoOpen_P2	OpenTriangl	Dholak Ga
82	Bb5	Castanets	CongaLoOpen_P3	Shaker	Shaker
83	B5	Mute Surdo	CongaLoOpen_P4	CowBellSide	Dholak Tun
84	C6	Open Surdo	CongaLoOpen_P5	AfricanCowBell	Tabla Baya 4
85	C#6	Small Club	Castanets	Castanets	Tabla Baya 5
86	D6	CR78 Tambour	Bongo High	Mute Surdo	Tabla BayaNa
87	D#6	Side Stick	Bongo Low	Open Surdo	Tabla BayaTi
88	E6	GospelHClp1	Mute H.Conga	Udo_Long	TablaBayaTun
89	F6	TR-808Snare2	Conga Hi Opn	808 Tom 2	Udu Pot 1 Hi
90	F#6	909 Snare 1	Conga MtLow	808 Tom 2	Udu Pot 1 Lo
91	G6	909 Snare 2	Conga Slap	808 Tom 2	Udu Pot 2Lng
92	G#6	909 SD 1	NewShekere1	808 Tom 2	Udu Pot 2 Sht
93	A6	TR-909Snare2	NewShekere2	808 Tom 2	TablaBayaSld
94	Bb6	Rap Snare	NHBngoMute	808 Tom 2	118:TablaByp
95	B6	JungleSnare1	L BongoMute	808 Cowbell	92:DholakPh
96	C7	House Snare	CajonHi	808 Conga	Dholak Na
97	C#7	House Snare	CajonHiFlm	808 Conga	OpenTriangl
98	D7	House Snare	Cajon Low	808 Conga	Hand Clap 21
99	D#7	Congas_SW	CajonLoFlm	Bend Gong	Hand Clap 1
100	E7	Congas_SW2	FlmncoHClp1	FlmncoHClp1	Dhol1a Rim2
101	F7	Congas_SW4	FlmncoHClp1	FlmncoHClp1	Dhol1a Sak
102	F#7	MamboCowBell	BongoCowBell	BongoCowBell	Doff 2 Dom 1
103	G7	Tabla Dhut	PopSnareFl	Bend tlk_drm	Doff 1 Rim 1
104	G#7	BongoCowBell	MamboCowBell	MamboCowBell	Doff 1 Dom
105	A7	Tabla_Ge	PopSnareDrag	Tabla_Ge	Doff 1 Sak
106	Bb7	Tabla Ge Hi	HiHatPhrase3	Tabla Ge Hi	Tabla1 Tak 1
107	B7	Talking Drum	CrashPhrase1	Talking Drum	Tabla1 Dom 1
108	C8	Bend tlk_drm	CrashPhrase2	Bend tlk_drm	Tabla Fx
109	C#8	Udo_Short	CrashPhrase3	Udo_Short	Tabla 1 Sak
110	D8	Udo_Long	CrashPhrase4	Udo_Long	Tabla 1 Rim
111	D#8	Udo_slap	CrashPhrase5	Udo_slap	Rek 1 Brass
112	E8	Tabla_Te	Crash_Stop	Tabla_Te	Rek 1 Roll
113	F8	Tabla_Na	RidePhrase1	Tabla_Na	Rek 1 Khan A
114	F#8	Tabla_Tun	RidePhrase2	Tabla_Tun	TablaNurRim1
115	G8	Ohkawa	RidePhrase3	Ohkawa	Rek 1 Khan B
116	G#8	H kotsuzumi	Scrtch Push2	H kotsuzumi	Sagat Mid

New Function to Recall and Edit Performances

		IndoMix 1	IndoMix 2	IndoMix 3	IndoMix 4
117	A8	L Kotsuzumi	Scrth Pull2	L Kotsuzumi	Sagat Hi
118	Bb8	Tabla Tong	Small Club	Open Surdo	Sagat Sak
119	B8	Tabla Tak	Explosion	Mute Surdo	Hager 1
120	C9	Tabla Tung	Wind	Conga Lo Opn	Zir 1
121	C#9	Tabla_Tang	Thunder	Tabla_Tun	Nakrazhan 1
122	D9	Tabla_Dung	Helicopter	Tabla_Tun	Nakrazhan 2
123	D#9	Harmess-bell1	Applause	Harmess-bell1	ZaghroutaSm2
124	E9	Harmess-bell2	Screaming	Harmess-bell2	ZaghroutaEd2
125	F9	Harmess-bell3	Laughing	Harmess-bell3	Voice One
126	F#9	CembaloEnding	GtFretNoise	CembaloEnding	Voice Two
127	G9	CembaloFree	Wind Chimes	CembaloFree	Voice Three

