Thank you sincerely for using products from Roland.

The Blues Cube Stage / Blues Cube Artist Owner's Manual from Roland contains some incorrect information.

Please make the corrections described below.

Corrections

Page 5

Incorrect:

Optional GA-FC Foot Controller for Channel Select, Dual Tone, and Tremolo, EFX Loop and Reverb

Correct:

Optional GA-FC Foot Controller for Channel Select, Dual Tone, Tremolo, and EFX Loop

Page 8

Incorrect:

GA-FC jack (Artist only)

You can connect a separately sold Roland GA-FC and use it to switch channels or turn DUAL TONE, TREMOLO, EFX LOOP, and REVERB on/off.

Correct:

GA-FC jack (Artist only)

You can connect a separately sold Roland GA-FC and use it to switch channels or turn DUAL TONE, TREMOLO, and EFX LOOP on/off.

Page 10

Incorrect:

Using the GA-FC

You can use the GA-FC to switch between CLEAN, CRUNCH, and DUAL TONE. You can also switch TREMOLO, EFX LOOP, and REVERB on/off.

Correct:

Using the GA-FC

You can use the GA-FC to switch between CLEAN, CRUNCH, and DUAL TONE. You can also switch TREMOLO, and EFX LOOP on/off.

Copyright (C) 2015 Roland Corporation