

## Welcome

Congratulations on the purchase of your Roland F-120 SuperNATURAL® Piano. This TurboStart will quickly introduce you to many of the F-120's features.

## Selecting Tones on the F-120

Use the following procedure to select tones on the F-120.

- 1 Press the Grand or Ensemble button so it lights to select a sound group.
- 2 Press the +/- buttons a number of times to select sounds within that group.

## Transposing the F-120 Keyboard

Use the following procedure to transpose the F-120.

- 1 While holding the Keytouch button, press the Twin Piano button and then release both buttons—the buttons flash, and the display shows "F01."
- 2 Press the flashing Metronome button to display "0."
- 3 Use the +/- buttons to select the desired transposition amount.

**Note:** The transposition range is from six half-steps down to five half-steps up.

- 4 Press the Keytouch or Twin Piano button to exit.

## Using the F-120 Metronome

Use the following procedure to work with the F-120 metronome.

- 1 Press the Metronome button so it lights to start the metronome.
- 2 Use the +/- buttons to change the tempo, or beats per minute.

## Selecting a Metronome Beat on the F-120

Use the following procedure to select a time signature for the F-120 metronome.

- 1 Press the Metronome button so it lights to start the metronome.
- 2 While holding down Metronome, use the +/- buttons to select a time signature.

**Note:** The 0/4 setting causes the metronome to play a beat without an accented note.

## Turning Off the F-120 Power Save Feature

Use the following procedure to turn off the F-120 power Save feature.

- 1 While holding down the Key Touch button, press the Twin Piano button, and then release both buttons.
- 2 Use the +/- buttons to select "F07" in the display.
- 3 Press the flashing Metronome button.
- 4 Use the +/- buttons to select "OFF"
- 5 Press Key Touch or Twin Piano to return to the main display.

## Initializing—Restoring the F-120 Factory Settings

The following procedure clears the F-120's internal memory and reloads its factory settings.

**Caution:** All User information is deleted when you perform a Factory Reset. Be sure to first back up anything you wish to preserve.

- 1 While holding down the Key Touch button and the Twin Piano button, turn on the power.

**Note:** The display shows "Sur" and the - button and + button flash.

- 2 Press the flashing + button to start the Factory Reset process.

**Note:** When the Factory Reset is complete, the display shows "End." Don't turn off the F-120's power before "End" appears on the display.

When "End" is displayed, turn the power off, then on again.

**Caution:** Never turn off the power during a Factory Reset. This may result in corrupted internal data and can prevent you from turning on the F-120.