

# HD-1 V-Drums® Lite

# Q&A



## A collection of popular articles from the HD-1 knowledge base

How Do I Select Drum Kits? .....	2
How Do I Set Up the HD-1 for My Playing Style? .....	3
How Do I Use the Built-In Metronome? .....	4
How Do I Listen to the Built-In Patterns? .....	5
How Do I Find HD-1 Articles in the RolandUS.com Knowledge Base? .....	6



## HD-1

### How Do I SELECT DRUM KITS?

---

Use the following steps to select a drum kit in the HD-1:

- 1** Press one of the **DRUMS 1-5** buttons so it lights to select its corresponding kit.
- 2** To hear a variation of the selected kit, press the **VARIATION** button so it lights.
- 3** Repeat the steps above to select other kits.

## HD-1

### How Do I SET UP THE HD-1 FOR MY PLAYING STYLE?

---

To optimize the HD-1 for the way you play, set the sensitivity of its pads as follows:

- 1 With the power on, press and hold the VARIATION button until it flashes.
- 2 While continuing to hold VARIATION, press one of the 1-5 buttons to select the corresponding sensitivity. You can choose
  - *Setting 1*—Very strong playing is required to produce the maximum volume from the HD-1.
  - *Setting 2*—Playing with a moderate amount of force produces the HD-1's loudest volume.
  - *Setting 3*—This is the factory-default medium setting.
  - *Setting 4*—The maximum volume is produced with light playing.
  - *Setting 5*—The maximum volume is produced with *very* light playing.
- 3 When you're finished, release the VARIATION button. Your sensitivity setting is stored automatically in the HD-1's memory.

## HD-1

### How Do I Use THE BUILT-IN METRONOME?

---

The HD-1 contains a metronome to help you with your timing. Here's how to use it:

- 1 Press the metronome ON/OFF button—the metronome starts playing.
- 2 To adjust the metronome's tempo, turn the TEMPO knob.
- 3 When you're finished, press the metronome ON/OFF button again to stop the metronome.

## HD-1

### How Do I Listen to the Built-In Patterns?

---

Here's how to listen to the HD-1's patterns:

- 1 Press and hold one of the DRUMS 1-5 buttons for a few seconds—a pattern using the current drum kit begins to play.

**Tip:** If you like, turn the TEMPO knob to adjust the pattern's tempo.

- 2 Press the VARIATION button to hear the pattern play using a different drum kit.
- 3 To stop the pattern, press one of the DRUMS 1-5 buttons.
- 4 To hear another pattern, repeat Steps 1-3, choosing a different DRUMS button in Step 1.

## HD-1

### How Do I Find HD-1 Articles in the RolandUS.com Knowledge Base?

---

- 1 Point your browser to the HD-1 [Support area](#) on RolandUS.com.
- 2 Click “Knowledge Base.”  
If you’re not already logged into Roland Backstage, the Roland Backstage login appears.
- 3 If you’re:
  - *a Roland Backstage member*—enter your email address and password, and then click the Login button.
  - *not yet a Roland Backstage member*—click “Create New Profile” to create a free new user account. As a Roland Backstage member, you become part of the online Roland US.com community and gain access to helpful tools and services.
- 4 Once you’re logged in, click the large Knowledge Base button.
- 5 On the Knowledge Base screen, enter “HD-1” in the Product field.
- 6 Click the Find button in the middle of the screen to browse the available HD-1 Knowledge Base articles.