


KR-107 Quick Stats

- 736 CD-quality GM2/GS sounds
- 18 drum sets, 1 SFX Set
- 128-note polyphony
- 88-key Progressive Hammer Action keyboard with Escapement
- 265 music styles
- 574 Music Assistant registrations
- Visual Music Assistant
- Visual Lesson
- DigiScore
- Twin Piano mode
- Piano Designer
- 36 user programs
- 16-track recorder with built-in metronome
- Reverb, Chorus, Sympathetic Resonance, Rotary, Advanced 3D, Physical Damper Simulation, 45 other effects
- USB host port
- LCD screen with SMF lyric display

Selecting Tones


Use the following procedure to select a tone:

1. Press a tone button (e.g. Piano, Organ, Guitar/Bass, etc.) in the TONE section (located to the right of the LCD screen.)
2. Use the  buttons on the screen, or the scrolling wheel to the right of the screen to locate a tone.
3. Touch a tone name on the screen.
4. To manipulate the split keyboard or to layer tones, press the EXIT button (located to the right of the LCD screen) and select SPLIT or LAYER.

Refer to the Owner's Manual, pg. 23 for more information. See pgs. 3-5 of this Turbo Start to see a complete Tone List.

Selecting Music Styles

Use the following procedure to select a Music Style from internal memory:

1. Press a music style button (e.g. Pop/Rock, Ballad/Acoustic, Oldies/Country etc.) in the MUSIC STYLE section (located to the left of the screen.)
2. Use the  buttons on the LCD screen or the scrolling wheel to the right of the screen to locate a music style.
3. Touch a music style on the screen.

4. Press the START/STOP button (located to the left of the screen) to play the music style; press the START/STOP button to silence the piano.

Refer to the Owner's Manual, pp. 47 for more information.

Selecting One Touch Programs


Use the following procedure to select automatic accompaniment settings:

1. Select a Music Style as described under "Selecting Music Styles."
2. Press the ONE TOUCH ARRANGER button (located to the right of the screen., next to the PIANO button)
3. Play a note on the lower half of the keyboard to begin the accompaniment.
4. Press the START/STOP button (located to the left of the screen) to silence the piano.

Refer to the Owner's Manual, pg. 48 for more information.

Selecting Music Assistants

Use the following procedure to select a Music Assistant:

1. Press the MUSIC ASSISTANT button (located to the left of the LCD screen.)
2. Use the  buttons on the screen, or the scrolling wheel to the right of the screen to locate a Music Assistant song.
3. Touch a registration on the screen.
4. Play a note on the lower half of the keyboard.
5. Press the START/STOP button (located to the left of the screen) to silence the piano.

Refer to the Owner's Manual Quick Start, pg. 16 for more information.

Selecting Visual Music Assistant

Use the following procedure to utilize the Visual Arranger:

1. Select a Music Assistant registration as described under "Selecting Music Assistants."
2. Press the button labeled "VISUAL" on the LCD screen with your finger.
3. Use the buttons labeled "Intro," "Verse," "Chorus," and "Ending" to custom-arrange the song visually.

Refer to the Owner's Manual Quick Start, pg. 16 for more information.

Using DigiScore

Use the following procedure to access and utilize the DigiScore feature:

1. Press the SONG/FILE button (located to the left of the LCD screen) to select a song. The score of this song will be displayed.
2. After selecting the song, press the DIGISCORE button (located to the left of the LCD screen).
3. If the selected song is one that has been recorded, the user can see his or her own performance. If the song is an internal song, the user can see the notes and play along with the song.

Refer to the Owner's Manual pg. 61 for more information.

Using Piano Designer


Use the following procedure to adjust the piano setting to your preference:





1. Press the PIANO DESIGNER button (located to the left of the LCD screen)
2. There are three factory settings. UNIVERSAL is the power-on default piano sound, SOLO is designed for a dedicated 'classical' sound, and ENSEMBLE is brighter to be heard above other instruments.
3. To the right of the factory settings, there is a six-point matrix that allows the adjustment of the piano's lid height, resonance, stereo width, hammer noise, hammer response, and key touch. Use your finger to adjust the amount of each, or press on a category (i.e. 'width') and use the scrolling wheel to the right of the LCD screen to adjust the level.
4. To store a custom setting, press the WRITE button on the bottom of the LCD screen, and the setting will be saved as USER. To retrieve this setting at any time, enter Piano Designer and press USER.

Refer to the Owner's Manual Quick Start, pg. 6, for more information.

Selecting Super Tones

Use the following procedure to access and browse the Super Tones:




1. Press the SUPER TONES button (located to the left of the LCD screen)
2. The LCD screen will display a Jazz Organ. Press the  button to access drawbars for the Organ.

3. Press the EXIT button (located to the right of the LCD screen) to return to the Super Tones page.
4. To cycle through organ sounds, press the  button on the LCD screen.
5. To switch to the next Super Tone, Twin Piano, press the  button on the LCD screen.
6. Continue to press the  button on the LCD screen to cycle through the tones in a category. Press the  button on the LCD screen to cycle through the categories.

Refer to the Owner's Manual Quick Start, pg. 14, for more information.

Playing a Song from an External Media Source

Use the following procedure to play a song from an external media source:

1. Insert formatted media into the host port on the panel of the KR-107.
2. Press the SONG/FILE button (located to the left of the LCD screen)
3. Touch the  or  button to get to the EXTERNAL MEMORY menu.
4. Use the  buttons on the LCD screen or the scrolling wheel to the right of the screen to locate a song.
5. Touch a song on the screen.
6. Press the PLAY/STOP button (located to the left of the disk drive) to play the song, and also to stop it.

Refer to the Owner's Manual, pg. 65 for more information.

Recording a Song

Use the following procedure to record a song

1. Press the REC button (located to the left of the USB host port.)

Note: The REC button indicator will light and the PLAY button will blink. If "Do you want to record a new song..." appears on the screen, touch NEW SONG and then touch OK on the screen.

2. Play a song
3. Press the PLAY/STOP (the gray button located to the left of the USB host port) button when you are done.
4. Press the RESET button
5. Press the PLAY button to listen to the song.





Refer to the Owner's Manual, pg. 91 for more information, including how to record a song with multiple tracks and accompaniment.

Saving a Recorded Song to Disk

Use the following procedure to save a recorded song to disk:

1. Record a song as described under "Recording a Song."
2. Insert a formatted media into the USB host port.


Note: You can format the media on the KR-107. Refer to the Owner's Manual, pg. 100 for more information.

3. Press the SONG/FILE button (located to the left of the LCD screen.)
 4. Touch FILE on the screen.
 5. Touch SAVE on the screen.
 6. Press the button labeled "DISK" and, using the  and  buttons, select a numerical destination on the disk.
 7. Touch the  button to name the song.
 8. Touch the  button on the screen.
- Refer to the Owner's Manual, pg. 102 for more information.

Intializing—Restoring Factory Settings

Use the following procedure to clear the internal memory and reload the factory settings:

Caution: All USER information will be lost. Be sure to back up any information you wish to keep.

1. Press the ONE TOUCH PIANO button (located to the right of the screen.)
2. Touch OPTION button (located to the left of the LCD screen).
3. Use  button on the screen to find the FACTORY RESET button.
4. Touch FACTORY RESET on the screen.
5. Touch EXECUTE on the screen.
6. Touch OK on the screen.
7. When "Turn on the power again" appears on the screen, turn the power off and then on to complete the factory reset.

Refer to the Owner's Manual, pg. 149 for more information.

Tone List

Piano

- 1 NaturalGrand
- 2 Vintage EP
- 3 FM E.Piano
- 4 Natural Hps.
- 5 Vibraphone
- 6 Ariel Piano
- 7 Natural Gnd2
- 8 Honky-tonk
- 9 '60sE.Piano1
- 10 Phase Clav.2
- 11 Morning Lite
- 12 Jazzy Vib+Gt
- 13 Piano Str2
- 14 Piano Oohs
- 15 Rock Piano
- 16 NaturalMello
- 17 Stage EP
- 18 Stage Phazer
- 19 Vibrations
- 20 Celesta
- 21 Marimba
- 22 Xylophone
- 23 NaturalC.Hps
- 24 Clav.
- 25 Music Box
- 26 Glockenspiel
- 27 Grand Piano1
- 28 Grand Piano2
- 29 MellowPiano1
- 30 PianoStrings
- 31 Bright Piano
- 32 DetunedPiano
- 33 Honky-tonk 2
- 34 MellowPiano2
- 35 PianoKidsCho
- 36 Air Grand
- 37 Ballad Piano
- 38 UprightPiano
- 39 Mono Piano
- 40 FM+SA EP
- 41 MIDI Piano1
- 42 EG+E.Piano 1
- 43 EG+E.Piano 2
- 44 Bell Piano
- 45 E. Grand
- 46 Mild E.Grand
- 47 Soft E.Piano
- 48 Phase EP
- 49 E.Piano 1
- 50 Pop E.Piano
- 51 Tremolo EP
- 52 '60sE.Piano2
- 53 E.Piano 2

- 54 EP Phase
- 55 St.FM EP
- 56 EP Legend
- 57 Harpsichord
- 58 Coupled Hps.
- 59 Harpsichord2
- 60 Comp Clav.
- 61 Reso Clav.
- 62 Phase Clav.
- 63 Pulse Clav
- 64 Celesta 2
- 65 Soft Marimba
- 66 Vibe Tr.
- 67 Marimba Tr.
- 68 Kalimba
- 69 Music Box 2
- 70 Music Bell
- 71 Music Bell 2
- 72 Tubular-bell
- 73 Church Bell
- 74 Ballad Bells
- 75 Bell Monitor
- 76 Timeline
- 77 Vibra Bells

Organ

- 1 ChurchOrgan1
- 2 Combo Jz.Org
- 3 Ballad Organ
- 4 German Acco.
- 5 Blues Harp
- 6 L-Organ
- 7 Jazz Organ1
- 8 Masked Opera
- 9 Grand Pipe
- 10 Theater Org.
- 11 La Seine
- 12 ParisRomance
- 13 Mellow Bars
- 14 Organ 1
- 15 Organ 2
- 16 Lower Organ1
- 17 Trem. Organ
- 18 '70s E.Organ
- 19 '60s Organ
- 20 Jazz Organ2
- 21 Jazz Organ3
- 22 Jazz Organ4
- 23 Chorus Organ
- 24 Perc. Organ
- 25 Rock Organ1
- 26 Rotary Organ
- 27 Rotary Org.S
- 28 Rotary Org.F

- 29 ChurchOrgan2
- 30 Pipe Organ
- 31 Trem.Flute
- 32 Organ Flute
- 33 Nason flt 8'
- 34 Organ Bass
- 35 Pipe Org. Bs
- 36 Digi Church
- 37 VS Organ
- 38 Metallic Org.
- 39 CheeseOrgan
- 40 Accordion Fr
- 41 AccordionFr2
- 42 Accordion It
- 43 Bright Acco.
- 44 Soft Acco.
- 45 Bandoneon
- 46 Harmonica

Guitar / Bass

- 1 EX Nylon Gtr
- 2 EX Steel Gt.
- 3 Jazz Guitar2
- 4 Fl.Gtr Roll
- 5 Mandolin
- 6 JC Chorus Gt
- 7 TC Clean ff
- 8 Overdrive Gt
- 9 DistortionGt
- 10 Amore Story
- 11 EX A.Guitar2
- 12 Uncle Martin
- 13 Flamenco Gtr
- 14 Jazz Guitar
- 15 Wild Ac.Bs
- 16 A.Bass+Cymbal
- 17 Acoustic Bs.
- 18 Fingered Bs.
- 19 Picked Bass
- 20 Fretless Bs.
- 21 Nylon Guitar
- 22 Requit Gtr
- 23 EX Ac.Guitar
- 24 Steel-str.Gt
- 25 12-str.Gt
- 26 Steel + Body
- 27 Nylon+Steel
- 28 EX A.Guitar3
- 29 Steel Vox
- 30 Ukulele
- 31 Hawaiian Gt
- 32 Clean Gt.
- 33 JC Clean Gt.
- 34 Mid Tone GTR

- 35 TC Rear Pick
- 36 Acid Guitar
- 37 Open Hard
- 38 Feedback Gt.
- 39 Power Guitar
- 40 Guitar Pinch
- 41 Mystic Gtr
- 42 Funk Gt.
- 43 Funk Gt.2
- 44 Muted Gt.
- 45 Muted Dis.Gt
- 46 Rock Rhythm
- 47 Dist Rtm GTR
- 48 Wah Brush Gt
- 49 Wood Bass
- 50 W.Bass+Ride
- 51 Rockabilly
- 52 Finger Slap
- 53 Mr.Smooth
- 54 Slap Bass 1
- 55 Slap Bass 2
- 56 Synth Bass 1
- 57 Jungle Bass
- 58 Hammer
- 59 SynthBass101
- 60 ResoSH Bass
- 61 Acid Bass
- 62 Clavi Bass
- 63 Synth Bass 2
- 64 Beef FM Bass
- 65 Attack Pulse
- 66 Rubber Bass
- 67 Sitar
- 68 Sitar 2
- 69 Banjo
- 70 Shamisen
- 71 Koto
- 72 Taisho Koto

Strings

- 1 DolceStrings
- 2 Velo Strings
- 3 Dolce Qrt
- 4 Lunar Strngs
- 5 R&B SoftPad
- 6 Wind & Str
- 7 Aerial Harp
- 8 Violin
- 9 Cello
- 10 Harp Strings
- 11 Mellow Str
- 12 EX Orchestra
- 13 Slow Violin
- 14 PizzicatoStr

- 15 Strings
- 16 Oct Strings
- 17 Strings 2
- 18 DecayStrings
- 19 Bright Str
- 20 Slow Strings
- 21 SlowStrings2
- 22 Legato Str
- 23 Warm Strings
- 24 Sahara Str
- 25 Decay Str2
- 26 Tremolo Str
- 27 Orchestra
- 28 Orchestra 2
- 29 Farewell
- 30 Choir Str
- 31 Bell Strings
- 32 Pearly Harp
- 33 Harp
- 34 St. Harp
- 35 Viola
- 36 Contrabass
- 37 Santur
- 38 Yang Qin
- 39 Yang Qin 2
- 40 Er Hu
- 41 Soft Pad
- 42 Soft Pad 2
- 43 Syn.Strings1
- 44 Syn.Strings2
- 45 Syn.Slow Str
- 46 OB Strings
- 47 JP Saw Str
- 48 Timpani
- 49 Warm JP Str
- 50 OrchestraHit
- 51 Good Old Hit
- 52 Euro Hit
- 53 6th Hit
- 54 Bass Hit
- 55 Philly Hit
- 56 Philly Hit 2
- 57 Mix Hit 1
- 58 Mix Hit 2

Sax/Brass

- 1 BlowAltoVib
- 2 PowerBrass 2
- 3 Sax Section
- 4 Flute
- 5 Good Old Day
- 6 Brass Sect 2
- 7 EX Tp&Shake
- 8 Super Tenor

Tone List Continued

9	AltoSax Soft	59	Flute 2	29	InfinitePhsr	79	Fat & Perky	129	Nylon Harp
10	Soprano Sax	60	Recorder	30	X Super Saws	80	Delayed Lead	130	Nylon + EP
11	Clarinet	61	Bottle Blow	31	Fat Stacks	81	Fantasia	131	HollowReleas
12	Oboe	62	Shakuhachi	32	Frgile Saws	82	Fantasia 2	132	Tubulence
13	EX Trumpet	63	Whistle	33	SuperSawSlow	83	New Age Pad	133	Landing Pad
14	Flugel Horn	64	Ocarina	34	Electrostars	84	New Age Pad2	134	Shangri-La
15	Pan Flute	65	Bagpipe	35	Bending Logo	85	Sugar Key	135	Motion Pad
16	Qu Di	66	Lochscape	36	2600 Sine	86	FreezinNight	136	Brightness
17	SuperF.Horns	67	Andes Mood	37	Square Wave	87	New Year Day	137	Org Bells
18	Angel Pipes	68	HimalayaPipe	38	Mg Square	88	Warm Pad	138	Goblin
19	Trumpet	69	Wide SynBrss	39	JP8 Square	89	Sine Pad	139	Saturn Siren
20	Tp Shake	70	DeepSynBrass	40	LM Square	90	Nu Epic Pad	140	RandomEnding
21	Bright Tp.	71	Jump Brass	41	Syn.Square	91	Hollow Pad	141	Echo Drops
22	Warm Tp.	72	Saw Brass1	42	CC Solo	92	Decay Pad	142	Echo Bell
23	Dark Trumpet	73	Saw Brass2	43	Sleeper	93	Polysynth	143	Echo Pan
24	Romantic Tp	74	Synth Brass1	44	Dual Sqr&Saw	94	P5 Poly	144	Echo Pan 2
25	Trombone	75	Synth Brass2	45	Jupiter Lead	95	Poly King	145	Big Panner
26	Trombone 2	76	DetuneSawBrss	46	Sinetific	96	Octave Stack	146	Ai-yai-a
27	Twin bones	77	Pro Brass	47	FM Lead 1	97	Hoovercraft	147	Saturn Rings
28	Bones Sect.	78	SynBrass	48	FM Lead 2	98	DOC Stack	148	Star Theme
29	Bright Tb.			49	Saw Wave	99	Bustranza	149	Rising Osc
30	Tuba			50	Saw	100	Space Voice	150	Galaxy Way
31	MutedTrumpet	Voice/SFX		51	Doctor Solo	101	Heaven II	151	12th Planet
32	MuteTrumpet2	1	Aerial Choir	52	Mg Lead	102	Warm SquPad	152	PolySweep Nz
33	MuteTrumpet3	2	Jazz Scat	53	P5 Saw Lead	103	Voyager	153	En-co-re
34	French Horns	3	Kid's Choir	54	JP SuperSaw	104	Film Cue	154	Piano 1
35	French Horn2	4	Dreaming Box	55	Rhythmic Saw	105	HumanKindnes	155	Piano 1w
36	OrchestraBrss	5	Rich Choir	56	Natural Lead	106	Bowed Glass	156	Piano 1d
37	Brass 1	6	Angels Choir	57	SequencedSaw	107	Metal Pad	157	Piano 2
38	Brass 2	7	Boys Choir	58	Waspy Synth	108	Orbiting	158	Piano 2w
39	BrassSection	8	Opera Voice	59	Velo SawLead	109	Visionary	159	Piano 3
40	PowerBrass	9	Mellow Choir	60	Attack Lead	110	Halo Pad	160	Piano 3w
41	Pop Orch	10	Holy Voices	61	DelyResoSaws	111	JP8 Sqr Pad	161	Honky-tonk
42	Contemp'Orch	11	Mystic Str	62	Wezcoast	112	Vox Sweep	162	Honky-tonk 2
43	Brass sfz	12	Trancy X	63	Syn.Calliope	113	Consolament	163	E.Piano 1
44	Brass Fall	13	HPF Slicer	64	JP8 Pulse	114	JP-8 Phase	164	E.Piano 2
45	Trumpet Fall	14	Side Band X	65	LM PureLead	115	Sweep Pad	165	'60s E.Piano
46	EX Alto Sax	15	Glasswaves	66	Orgaenia	116	Sweep Pad 2	166	E.Piano 1v
47	AltoSax + Tp	16	Church Choir	67	Chiffer Lead	117	Ice Rain	167	E.Piano 2v
48	Alto Sax	17	Voice Oohs	68	Cheese Saw	118	Clavi Pad	168	Detuned EP 1
49	Grow Sax	18	Voice Oohs 2	69	JP OctAttack	119	Toy Box	169	Detuned EP 2
50	BreathyTenor	19	Choir Hahs	70	Charang	120	Soundtrack	170	Harpsichord
51	Tenor Sax	20	Decay Choir	71	Reso Saw	121	Crystal	171	Coupled Hps.
52	Tenor Sax 2	21	Doos Voice	72	Wire Lead	122	Syn Mallet	172	Harpsi.w
53	Tenor Sax f	22	Doot Accent	73	2600 SubOsc	123	ChristmasBel	173	Harpsi.o
54	Tenor Sax B	23	Dat Accent	74	Solo Vox	124	Clear Bells	174	Clav.
55	Baritone Sax	24	Bap Accent	75	RAVE Vox	125	Himalaya Ice	175	Celesta
56	English Horn	25	Thum Voice	76	5th Saw Wave	126	Glittery Pad	176	Glockenspiel
57	Bassoon	26	Humming	77	Freeze Synth	127	Atmosphere	177	Music Box
58	Piccolo	27	SynVox	78	Bass & Lead	128	Harpvox	178	Vibraphone
179	Vibe.w	28	Analog Voice	189	Pop Organ 1	194	Church Org.3	199	Accordion Fr
180	Marimba	184	Church Bell	190	Detuned Or.1	195	Full Organ	200	Accordion It
181	Marimba w	185	Carillon	191	Detuned Or.2	196	Jazz Organ1	201	Harmonica
182	Xylophone	186	Santur	192	Church Org.1	197	Rock Organ	202	Bandoneon
183	Tubular-bell	187	Organ 1	193	Church Org.2	198	Reed Organ	203	Nylon-str.Gt
		188	Organ 2						

Tone List Continued

204 Nylon Gt.2	240 PizzicatoStr	276 Clarinet	312 Echo Drops	348 Stream
205 Nylon Gt.o	241 Harp	277 Piccolo	313 Echo Bell	349 Bubble
206 Ukulele	242 Timpani	278 Flute	314 Echo Pan	350 Bird
207 Steel-str.Gt	243 Strings	279 Recorder	315 Star Theme	351 Dog
208 12-str.Gt	244 Orchestra	280 Pan Flute	316 Sitar	352 Horse-Gallop
209 Mandolin	245 Slow Strings	281 Bottle Blow	317 Sitar 2	353 Bird 2
210 Jazz Guitar	246 Syn.Strings1	282 Shakuhachi	318 Banjo	354 Telephone 1
211 Hawaiian Gt	247 Syn.Strings2	283 Whistle	319 Shamisen	355 Telephone 2
212 Clean Gt.	248 Syn.Strings3	284 Ocarina	320 Koto	356 DoorCreaking
213 Chorus Gt.	249 Choir Aahs	285 Square Wave	321 Taisho Koto	357 Door
214 Muted Gt.	250 Choir	286 Square	322 Kalimba	358 Scratch
215 Funk Gt.	251 Pop Voice	287 Sine Wave	323 Bagpipe	359 Windchime
216 Funk Gt.2	252 SynVox	288 Saw Wave	324 Fiddle	360 Helicopter
217 Overdrive Gt	253 OrchestraHit	289 Saw	325 Shanai	361 Car-Engine
218 DistortionGt	254 Trumpet	290 Doctor Solo	326 Tinkle Bell	362 Car-Stop
219 Feedback Gt.	255 Trombone	291 Syn.Calliope	327 Agogo	363 Car-Pass
220 Gt.Harmonics	256 Trombone 2	292 Chiffer Lead	328 Steel Drums	364 Car-Crash
221 Gt. Feedback	257 Tuba	293 Charang	329 Woodblock	365 Siren
222 Acoustic Bs.	258 MutedTrumpet	294 Solo Vox	330 Castanets	366 Train
223 Fingered Bs.	259 French Horns	295 5th Saw Wave	331 Taiko	367 Jetplane
224 Picked Bs.	260 French Horn2	296 Bass & Lead	332 Concert BD	368 Starship
225 Fretless Bs.	261 Brass 1	297 Fantasia	333 Melo. Tom 1	369 Burst Noise
226 Slap Bass 1	262 Brass 2	298 Warm Pad	334 Melo. Tom 2	370 Applause
227 Slap Bass 2	263 Synth Brass1	299 Polysynth	335 Synth Drum	371 Laughing
228 SynthBass101	264 Synth Brass2	300 Space Voice	336 808 Tom	372 Screaming
229 Synth Bass 1	265 Synth Brass3	301 Bowed Glass	337 Elec Perc.	373 Punch
230 Synth Bass 2	266 Synth Brass4	302 Metal Pad	338 Reverse Cym.	374 Heart Beat
231 Synth Bass 3	267 AnalogBrass1	303 Halo Pad	339 Gt.FretNoise	375 Footsteps
232 Synth Bass 4	268 AnalogBrass2	304 Sweep Pad	340 Gt.Cut Noise	376 Gun Shot
233 Rubber Bass	269 Soprano Sax	305 Ice Rain	341 String Slap	377 Machine Gun
234 Violin	270 Alto Sax	306 Soundtrack	342 Breath Noise	378 Lasergun
235 Slow Violin	271 Tenor Sax	307 Crystal	343 Fl.Key Click	379 Explosion
236 Viola	272 Baritone Sax	308 Syn Mallet	344 Seashore	
237 Cello	273 Oboe	309 Atmosphere	345 Rain	
238 Contrabass	274 English Horn	310 Brightness	346 Thunder	
239 Tremolo Str	275 Bassoon	311 Goblin	347 Wind	

Music Style List

Pop/Rock	4 AcoustEzLstn	59 P.Swing	11 Foxtrot	34 Beguine
1 Pop	5 UnpluggedPop	60 P.Shuffle	12 Swing Fox	35 Oye Son
2 '80s Pop 1	6 UnplugBallad	61 P.Boogie	13 Fox Band	36 Revival
3 Funky Disco	7 Adult Pop 1	62 P.'50s Rock	14 Gipsy Swing	37 Gospel Piano
4 AdultContemp	8 Adult Pop 2	63 P.Latin	15 Fast Swing	38 Asian Rhumba
5 Uptown Rock	9 6/8 Ballad		16 JzGuitrSwing	
6 EZ Listening	10 Love Beat	[Oldies/Country]	17 Jazz Waltz	Trad/World
7 Strumin'Awat	11 UnplugShuffl	1 Detroit Pop	18 Blue Boogie	1 Musical
8 '70s Disco 1	12 CoolLiveBand	2 '60s Rock'n	19 BigBandBalad	2 Pub Boogie
9 SmoothContmp	13 Night Ballad	3 DreamSloRock	20 '30s BigBand	3 Vienna Waltz
10 Simple Rock	14 GuitarShuffl	4 CountryRock1	21 Big Band 2	4 Kids Shuffle
11 '60s Feelin'	15 Euro Ballad	5 CountryBald1	22 Jazz Ballad	5 Movie March
12 16Beat Pop	16 Guitar Trio	6 Groovin R&B	23 LooseBigBand	6 Music Hall
13 Light Pop	17 MidnightBald	7 Oldies 1	24 Smooth Jazz	7 Orch Bolero
14 Bright Pop	18 Pop Ballad	8 Clock Rock'n	25 A Cappella	8 Orch Waltz
15 Heart Beat	19 Piano Pop	9 CountryPop 1	26 Scat Swing	9 Holiday 1
16 Easy Pop	20 Love Songs	10 SwinginCntry	27 Organ Swing	10 Classic
17 '80s Pop 2	21 12/8 Ballad	11 Soul	28 Dixieland	11 Jing Ju
18 '80s Pop 3	22 Scat Ballad	12 Rock'n Slow	29 Hawaiian	12 MarchingBand
19 Cute Pop	23 '60s Ballad	13 Oldies 2	30 Hula	13 March
20 LovelyShuffl	24 Torch Song 1	14 CountryBald2		14 Slow Waltz
21 '70s Disco 2	25 Torch Song 2	15 CountrySwing	Gospel/Latin	15 Fast Waltz
22 '70s Dance	26 Strings	16 Rock'n Fever	1 Latin Pop 1	16 Paris
23 Fever Dance	27 8BeatBallad1	17 Country Beat	2 Orch Bossa	17 Quiet Waltz
24 Euro Dance	28 8BeatBallad2	18 Slow Country	3 Rhumba	18 Holiday 2
25 Hard Tekno	29 Fireside	19 CountryRock2	4 GospelShuffl	19 Holiday 3
26 Big House	30 Piano Ballad	20 Country Fox	5 ContPraise 1	20 2 Beat
27 '90s House	31 Story Ballad	21 Blues	6 ContPraise 2	21 Lager Polka
28 House Pop	32 SimpleBallad	22 R&B	7 Gospel	22 Slow Polka
29 Ibiza Dance	33 ClassicBalad	23 Slow Dance	8 Samba	23 AustrianPolk
30 Cool Rap	34 Symph Ballad	24 Twist	9 ModernChaCha	24 AustrianWalz
31 Now Hip Hop	35 R.8-Beat 1	25 '60s Beach	10 Salsa	25 Irish
32 Twostep	36 R.8-Beat 2	26 Slow Oldies	11 Soft Gospel	26 Tejano
33 HipHop Beat	37 R.16-Beat 1	27 Early Rock	12 Gospel Shout	27 Celtic
34 Hip'n Hop	38 R.16-Beat 2	28 Go Go Rock	13 AcoustRhumba	28 Musette
35 Easy Hop	39 R.16-Beat 3	29 Mersey Beat	14 Acoust Samba	29 Scotland
36 MorningShffl	40 R.16-Beat 4	30 CountryPop 2	15 Trad Rhumba	30 Japan
37 Groovy Pop	41 R.Afro&Swing	31 Cajun	16 Gospel Pop	31 Ireland
38 Smile Pop	42 R.5BeatSwing	32 Country	17 GospelBallad	32 Paso Doble
39 Warm Pop	43 R.Shuffle 1	33 Cntry Dreams	18 Latin Dance	33 China Pop
40 Sunny Pop	44 R.Waltz 1	34 Charleston	19 Cha Cha	34 Jiang Nan
41 Feel Good	45 R.March 1	35 Bluegrass	20 Trad Tango	35 Xi Bei
42 US Groove	46 R.5-Beat	36 Deep Country	21 SunshineBosa	36 SchlagerBeat
43 Steady Rock	47 R.7-Beat		22 Jazz Bossa	37 PartySchlagr
44 Shuffle Rock	48 P.Pop 1	Big Band/ Swing	23 Merengue	38 '70sSchlager
45 Dyno Rock	49 P.Classic 1	1 MidnitSloSwg	24 GuitarRhumba	39 Disco Fox
46 Power Rock	50 P.Night	2 BigBand Slow	25 Mambo	40 Party Polka
47 Heavy Rock	51 P.Bossa Nova	3 Big Band	26 Fast Samba	41 RockSchlager
48 Thump Rock	52 P.Ragtime	4 BigBand Med	27 Fast Bossa	42 ShufflSchlgr
49 Asian Pop	53 P.Classic 2	5 BigBand Fast	28 Big Samba	43 SimpleMarch1
	54 P.Ballad 2	6 Medium Swing	29 Luv Bossa	44 SimpleMarch2
Ballad/Acoustic	55 P.Swing Pop	7 Jive	30 Mid Bossa	45 Simple Waltz
1 ModernBallad	56 P.Rock'nRoll	8 Slow Swing	31 Latin Pop 2	46 Kids 4/4
2 '80s Ballad	57 P.Concerto 1	9 Quick Step	32 Reggae	47 Kids 6/8
3 AcoustBallad	58 P.Concerto 2	10 StringsSwing	33 Tango	48 Kids
				49 Kids Dance

KR-107

Internal Song List

Folks

- 1 Greensleeves
- 2 Entertainer
- 3 Annie Laurie
- 4 Londonderry Air
- 5 Ave Maria
- 6 Amazing Grace
- 7 Little Brown Jug
8. When The Saints Go Marching In
- 9 Stagecoach
- 10 Hallelujah!

Jazzy

- 1 Fly Free
- 2 Secret Agent
- 3 Late Night Chopin
- 4 Blue Sky Rag
- 5 Preludelight
- 6 Sun Daze
- 7 Keepers Tale
- 8 Count On The Blues
- 9 One Down And Easy
- 10 A Prelude To ...
- 11 Bach's A Boppin'
- 12 Kismet's Salsa
- 13 From Matthew's Passion
- 14 Roll Over Ludwig

Kids

- 1 Grandfather's Clock
- 2 Old MacDonald Had A Farm
- 3 Twinkle Twinkle, Little Star
- 4 Mary Had A Little Lamb
- 5 London Bridge
- 6 Jingle Bells
- 7 Silent Night, Holy Night
- 8 Joy To The World
- 9 Puppy's March
- 10 Frog Song
- 11 Little Fox
- 12 Lightly Row
- 13 The Cuckoo

EZ Classical

- 1 La Fille Aux Cheveux De Lin
- 2 La Campanell
- 3 Eine Kleine Nachtmusik
- 4 Les patineurs, Valse
- 5 Divertimento
- 6 Impromptu, Op.90-2
- 7 Gnessienne 1

- 8 Die Lorelei
- 9 Brindisi
- 10 Air sul G
- 11 Fantaisie Impromptu
- 12 Grande Valse Brillante
- 13 Gymnopedie 1
- 14 Liebestraume 3
- 15 Mondschein
- 16 Nocturne No.2
- 17 Valse, op.64-1
- 18 Prelude, op.28-15
- 19 Traumerei
- 20 Turkischer Marsch(Mozart)
- 21 Ungarische Tanze 5
- 22 O'sole Mio
- 23 La Primavera
- 24 Trepak
- 25 Canon (Pachelbel)
- 26 Ombra maifu
- 27 Sonata (Haydn)
- 28 Italian Concerto

Classical

- 1 Sonate No.15
- 2 Liebestraume 3
- 3 Etude, op.10-3
- 4 Je te veux
- 5 Valse, op.64-1
- 6 Golliwog's Cakewalk
- 7 Fantaisie Impromptu
- 8 Arabesque 1
- 9 Blauen Donau
- 10 Auf Flugeln des Gesanges
- 11 Mazurka No.5
- 12 Gymnopedie 1
- 13 Etude, op.25-1
- 14 Clair de Lune
- 15 Etude, op.10-5
- 16 Dr. Gradus Ad Parnassum
- 17 Grande Valse Brillante
- 18 La priere de la Vierge
- 19 Course en Troika
- 20 To The Spring
- 21 Valse, op.64-2
- 22 Radetzky Marsch
- 23 Traumerei
- 24 Moments Musicaux 3
- 25 Prelude, op.28-15
- 26 Harmonious Blacksmith
- 27 Ungarische Tanze 5
- 28 Turkischer Marsch (Beethoven)
- 29 Nocturne No.2

- 30 Fruhlingslied
- 31 Praludium
- 32 Jagerlied
- 33 Menuet Antique
- 34 Fur Elise
- 35 Turkischer Marsch(Mozart)
- 36 Standchen
- 37 Humoreske
- 38 Blumenlied
- 39 Alpenglockchen
- 40 Menuett G dur(Beethoven)
- 41 Venezianisches Gondellied
- 42 Alpenabendrote
- 43 Farewell to the Piano
- 44 Brautchor
- 45 Battle of Waterloo
- 46 Wiener Marsch
- 47 Le Coucou
- 48 Menuett G dur(Bach)
- 49 Spinnerlied
- 50 Gavotte
- 51 Heidenroslein
- 52 Zigeuner Tanz
- 53 La Cinquantaine
- 54 Csikos Post
- 55 Dolly's Dreaming Awakening
- 56 La Violette
- 57 Frohlicher Landmann
- 58 Sonatine op.36-1(Clementi)
- 59 Sonatine op.20-1(Kuhlau)
- 60 Sonatine No.5(Beethoven)

Practice

- 1 Arabesque
- 2 Pastoral
- 3 A Small Gathering
- 4 Innocence
- 5 Progress
- 6 The Clear Stream
- 7 Gracefulness
- 8 The Hunt
- 9 Tender Flower
- 10 The Young Shepherdess
- 11 Farewell
- 12 Consolation
- 13 Austrian Dance
- 14 Ballad
- 15 Sighing
- 16 The Chatterbox
- 17 Restlessness
- 18 Ave Maria
- 19 Tarantella
- 20 Angelic Harmony
- 21 Gondola Song
- 22 The Return
- 23 The Swallow
- 24 The Knight Errant
- 25 Openness
- 26 Invention 1
- 27 Invention 2
- 28 Invention 3
- 29 Invention 4
- 30 Invention 5
- 31 Invention 6
- 32 Invention 7
- 33 Invention 8
- 34 Invention 9
- 35 Invention 10
- 36 Invention 11
- 37 Invention 12
- 38 Invention 13
- 39 Invention 14
- 40 Invention 15
- 41 Beyer 15
- 42 Beyer 21
- 43 Beyer 25
- 44 Beyer 29
- 45 Beyer 34
- 46 Beyer 38
- 47 Beyer 42
- 48 Beyer 46
- 49 Beyer 51
- 50 Beyer 55
- 51 Beyer 60
- 52 Beyer 64
- 53 Beyer 67
- 54 Beyer 73
- 55 Beyer 78
- 56 Beyer 81
- 57 Beyer 90
- 58 Beyer 93
- 59 Beyer 98
- 60 Beyer 103
- 61 Czerny 100- 1
- 62 Czerny 100-10
- 63 Czerny 100-20
- 64 Czerny 100-30
- 65 Czerny 100-38
- 66 Czerny 100-43
- 67 Czerny 100-60
- 68 Czerny 100-75
- 69 Czerny 100-86
- 70 Czerny 100-96