

Welcome

Congratulations on the purchase of your Roland RP-301R SuperNATURAL® Piano. This TurboStart will quickly introduce you to many of the RP-301R's features.

Selecting Tones on the RP-301R

Use the following procedure to select tones on the RP-301R.

- 1 Press a tone category button so it lights.

Note: Select from Piano and Other.

- 2 Use the –/+ buttons to select a tone in the chosen category.

Tip: The "Other" category has dozens of tones to select from. To quickly navigate to a higher number, press and hold the + button, and then press and hold the – button. To quickly navigate to a lower number, press and hold the – button, and then press and hold the + button.

Transposing the RP-301R Keyboard

Use the following procedure to transpose the RP-301 keyboard.

- 1 Press the Transpose button so it lights.
- 2 Press and hold the Transpose button, and then use the –/+ buttons to set the transposition amount.

Note: The transpose range is from six half-steps down to five half-steps up.

Note: You can enable and disable transposition by pressing the Transpose button so it's lit or not. The keyboard remembers your most recent transposition setting until you change it or turn off the RP-301.

Using the Metronome on the RP-301R

Use the following procedure to work with the RP-301R metronome.

- 1 Press Metronome so it lights—the metronome starts.
- 2 Use the –/+ buttons to change the tempo, or beats per minute.

Setting the Time Signature on the RP-301R

Use this procedure to change the RP-301R metronome's time signature or meter.

- 1 Press Metronome so it lights—the metronome starts.
- 2 Press and hold the Metronome button and use the –/+ buttons to select a time signature or meter.

Note: When you select "0/4," the metronome produces a beat with no downbeat accent.

Turning Off the RP-301R Power Save Feature

Use the following procedure to turn off the RP-301R Power Save feature.

- 1 Press the Split and Transpose buttons at the same time so they flash.
- 2 Use the –/+ buttons to select "Auto Off" on the display.
- 3 Press the flashing Metronome button.
- 4 Press the – button to select "OFF."
- 5 Press the flashing Split and Metronome buttons at the same time so they're not lit.

Note: If you want the RP-301R to remember your setting, be sure to perform a Memory Backup procedure, as explained on page 21 of the Owner's Manual.

Initializing—Restoring the RP-301R Factory Settings

The following procedure clears the internal memory and reloads the factory settings:

Caution: All User information will be lost!!! Be sure to first back up any information you wish to keep!

- 1 While holding down the Split and Transpose buttons, turn on the RP-301R.
- 2 Press the + button to select "Y."

Note: When the Factory Reset has been completed, "End" appears on the display. Never turn off the power before "End" appears.

- 3 When the display shows "End," turn the keyboard off, and then back on again.

Note: Never turn off the power during a Factory Reset. This may result in corrupted internal data and may prevent the RP-301R from being turned on again.