

Welcome

Congratulations on the purchase of your Roland RP-301 SuperNATURAL® Piano. This TurboStart will quickly introduce you to many of the RP-301's features.

Selecting Tones on the RP-301

Use the following procedure to select tones on the RP-301.

- 1 Press the Grand or Ensemble button so it lights to select a sound group.
- 2 Use the +/- buttons to select sounds within the chosen group.

Transposing the RP-301 Keyboard

Use the following procedure to transpose the RP-301 keyboard.

- 1 While holding the Keytouch button, press the Twin Piano button and then release both buttons—the buttons flash and the display shows "F01."
- 2 Press the flashing Metronome button to display "0."
- 3 Use the -/+ buttons to set the desired transposition amount.

Note: The transpose range is from six half-steps down to five half-steps up.

- 4 Press the Keytouch or Twin Piano button to exit.

Using the Metronome on the RP-301

Use the following procedure to work with the RP-301 metronome:

- 1 Press the Metronome button so it lights to start the metronome.
- 2 Use the + / - buttons to change the tempo, or beats per minute.

Selecting a Metronome Beat on the RP-301

Use the following procedure to select a time signature on the RP-301 metronome:

- 1 Press the Metronome button so it lights to start the metronome.
- 2 While holding down Metronome, use the + / - buttons to select a time signature.

Note: The 0/4 setting sounds the metronome without an accented beat or downbeat.

- 3 Release the Metronome button.

Turning Off the RP-301 Power Save Feature

Use the following procedure to turn off the RP-301 Power Save feature:

- 1 While holding down the Key Touch button, press the Twin Piano button, and then release both buttons.
- 2 Use the + / - buttons to select "F07" in the display.
- 3 Press the flashing Metronome button.
- 4 Use the + / - buttons to select "OFF."
- 5 Press Key Touch or Twin Piano to return to the main display.

Initializing—Restoring the RP-301 Factory Settings

The following procedure clears the internal memory and reloads the RP-301 factory settings.

Caution! All User information will be lost!!! Be sure to first back up any information you wish to keep!

- 1 While holding down the Key Touch button and the Twin Piano button, turn on the power.

Note: The display indicates "Sur" and the - button and + button flash.

- 2 Press the flashing + button to start the Factory Reset process.

Note: When the Factory Reset has been completed, "End" appears on the display. Don't turn off the power before "End" appears.

- 3 Once "End" is displayed, turn the power off, and then on again.

Note: Never turn off the power during a Factory Reset. This may result in corrupted internal data and may prevent the RP-301 from being turned on again.