



Roland Sound Library

SR-JV80-01

POP EXPANSION

SR-JV80-01

POP EXPANSION

Copyright © 1992 by ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form the permission of ROLAND CORPORATION.

本書の一部、もしくは全部を無断で複写・転載することを禁じます。

Thank you for purchasing the Roland Sound Library SR-JV80-01 "Pop Expansion."

This expansion board stores 224 waveforms, including acoustic instruments (like grand piano, saxophone, and violin), synthetic sounds (represented by PWW, GR300 Saw), and percussion & rhythmic instruments (such as gong, tabla, and brush). It also contains 145 different patches synthesized by using the waveforms of the expansion board and those of the instrument you use.

Read the owner's manual carefully in order to fully enjoy utilizing the patches at live concerts and recordings, and to have fun creating sounds by combining the waveforms of the instrument you use and those of the expansion board.

Note: Depending on the wave used, pitch variations may be limited.

このたびは、ローランド・サウンド・ライブラリーSR-JV80-01「ポップ・エクスペンション」をお買い上げいただきまして、まことにありがとうございます。

このエクスペンション・ボードには、グランド・ピアノやサクソフーン、バイオリンなどのアコースティック楽器や、PWWやGR300 Sawなどのシンセサウンドから、ゴングやタブラ、ブラシなどのパーカッション/リズム楽器まで様々なウェーブが224種類と、エクスペンション・ボードおよび本体のウェーブを使用して作られたパッチが145種類記憶されています。

お手持ちの機種種の取り扱い説明書に従って、記憶されているパッチをライブやレコーディングなどで利用したり、本体のウェーブやエクスペンション・ボードのウェーブを組み合わせた音作りなどをお楽しみ下さい。


注 ウェーブによってはピッチの変化が制限されています。

■ INSTALLING THE EXPANSION BOARD

1. Remove the cover located at the bottom or top of the instrument you use.
2. Rotate the board holders so that they align with the connector.
3. Mount the expansion board on the connector so that three board holders project through the expansion board.
4. Affix the expansion board by using the attached tool to turn the board holders in the LOCK direction.
To remove the expansion board, turn the board holders in the UNLOCK direction and hook the board with the Provided tool.
Attach the cover.
5. Check if the expansion board is correctly attached.
If the "EXP" display is not selected (shown) in the Waveform Selection Screen (refer to the owner's manual of the instrument you use), remove the expansion board and attach it again properly.

■ エクスペンション・ボードの取り付けかた

1. 使用機器の底部、または上部にあるカバーをはずします。
2. 基板ホルダーを、図2のような向きに合わせます。
3. エクスペンション・ボードのコネクターを、本体のコネクターに完全に差し込みます。このとき3つの基板ホルダーが、エクスペンション・ボードから出るようになります。
4. 付属の固定用具で基板ホルダーをLOCK方向に回し、エクスペンション・ボードを固定します。
エクスペンション・ボードの取りはずしは、基板ホルダーをUNLOCK方向に回し、固定用具を引っ掛けて取りはずします。
最後にカバーを取り付けます。
5. エクスペンション・ボードの取り付けが正しく行なわれたかを確認します。
ウェーブフォームの選択画面(使用機器の取扱説明書参照)で"EXP"が選べない(表示されない)ときは、もう一度エクスペンション・ボードをつけ直してください。

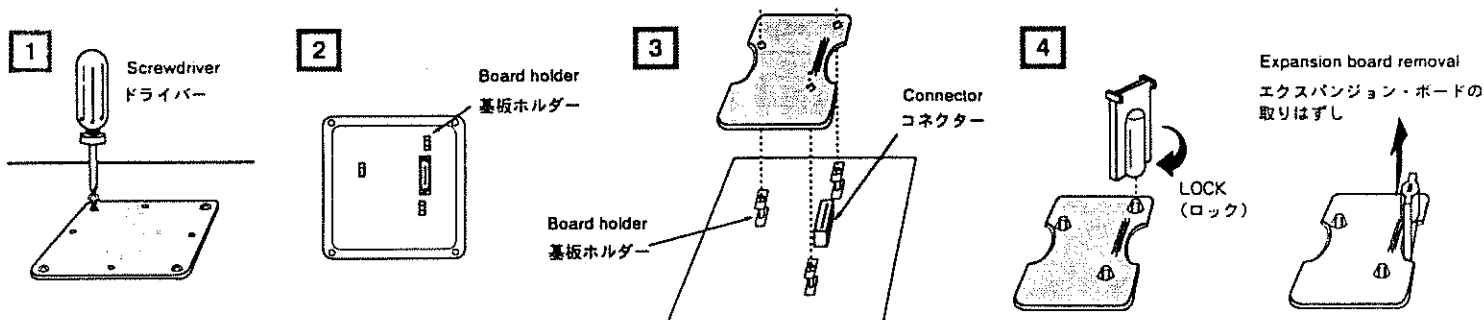

■ Note

- When you use the Waveforms / Patches stored on the expansion board with the instrument other than the JV Series, those Waveforms / Patches may sound slightly different from those used with an JV unit.
For a detailed explanation about this, read the owner's manual of the instrument you use.
- To use Patch data stored in the expansion board, load the relevant Patch data according to the owner's manual of the instrument you use.

■ ご注意

- JVシリーズ以外の機器でエクスペンション・ボードのウェーブフォーム/パッチを使用したときは、JVシリーズで使用したときの音色と多少異なる場合があります。
詳しくは、使用機器の取扱説明書をご覧ください。
- エクスペンション・ボードのパッチ・データを使う場合は、使用機器の取扱説明書に従って、パッチ・データのロードを実行してください。

WAVE LIST

No.	Name
1	Grand sft 1A
2	Grand sft 1B
3	Grand sft 1C
4	Grand hrd 1A
5	Grand hrd 1B
6	Grand hrd 1C
7	E.Grand 2
8	Wurly soft A
9	Wurly soft B
10	Wurly soft C
11	Wurly hard A
12	Wurly hard B
13	Wurly hard C
14	E.Piano 3A
15	E.Piano 3B
16	E.Piano 3C
17	Clav 2A
18	Clav 2B
19	Clav 2C
20	Clav 3A
21	Clav 3B
22	Clav 3C
23	Clav 4A
24	Clav 4B
25	Clav 4C
26	Jazz Organ 2
27	Belled Organ
28	Even Bars
29	8ft Stop
30	Mad Organ A
31	Mad Organ B
32	Mad Organ C
33	60's Organ 1
34	60's Organ 2
35	60's Organ 3
36	60's Organ 4
37	Celeste
38	Music Box

No.	Name
39	Jazz Bass 1
40	Jazz Bass 2
41	P.Bass 1
42	P.Bass 2
43	Stick
44	Fretless 2A
45	Fretless 2B
46	Fretless 2C
47	Ac.Bass A
48	Ac.Bass B
49	Ac.Bass C
50	Bs Harmonix
51	Bs Slide
52	Organ Bass 1
53	Organ Bass 2
54	Jazz Guitar
55	Mute GTR 2
56	Funky Attack
57	Lead GTR 1A
58	Lead GTR 1B
59	Lead GTR 1C
60	Mute Dist
61	Overdrive 1A
62	Overdrive 1B
63	Overdrive 1C
64	Power Chords
65	Harmo Lead
66	E.Sitar
67	Banjo
68	Pedal Steel
69	Shamisen A
70	Shamisen B
71	Shamisen C
72	Koto Attack
73	Sanza soft
74	Sanza hard
75	Pad Hit
76	Santur A

No.	Name
77	Sentur B
78	Santur C
79	Glockenspiel
80	Xylophone
81	Tubular Bell
82	Jazz Flute A
83	Jazz Flute B
84	Jazz Flute C
85	Sing Flute
86	Trumpet 2A
87	Trumpet 2B
88	Trumpet 2C
89	Flugel A
90	Flugel B
91	Flugel C
92	Tuba 1
93	Clarinet 1
94	Oboe 1
95	Bassoon 1
96	Bassoon & Oboe
97	F.Horn Sect 1
98	Soprano Sax
99	Alto mp A
100	Alto mp B
101	Alto mp C
102	Tenor Breathy
103	Tenor Sax mf
104	Baritone Sax
105	Multi Sax 1
106	Multi Sax 2
107	Shakuhachi
108	Harmonica 1
109	Whistle 1
110	Tb Sect A
111	Tb Sect B
112	Tb Sect C
113	T.Sax Sect A
114	T.Sax Sect B

No.	Name
115	T.Sax Sect C
116	Violin A
117	Violin B
118	Violin C
119	Cello A
120	Cello B
121	Cello C
122	Violin & Cello
123	STR Attack A
124	STR Attack B
125	STR Attack C
126	Choir 1A
127	Choir 1B
128	Choir 1C
129	Huge MIDI
130	Bell VOX
131	Synharmon
132	PWM
133	Rip Lead
134	Bright Lead
135	GR300 Sew
136	Vocal Wave
137	Sync Wave
138	Sync Sweep
139	Cello Wave
140	Wuffy Wave
141	VOX Noise 2
142	Bottle Lp A
143	Bottle Lp B
144	Bottle Lp C
145	Breath Wind
146	Harmonica Attack
147	Breath Whisl
148	Breath Hrmon
149	Metal Rain
150	Pink Noise
151	OrchestraHit
152	Kong

No.	Name
153	Timpani
154	Gong
155	Hard Kick
156	809 Kick
157	809 Snare
158	Swing Snare
159	Dance Snare
160	Room Snare
161	Hard Snare
162	Brush Slap
163	Brush Swish
164	Brush Roll
165	Syn Cl.Hat
166	Syn Open Hat
167	Tom Hi
168	Tom Mid
169	Tom Lo
170	Ride 2
171	China Cymbal
172	Cuica Hi
173	Cuica Lo
174	808 Cowbell
175	Claves
176	Wood Block
177	Finger Snap
178	Scratch 1
179	Scratch 2
180	Tabla 1
181	Tabla 2
182	Tabla 3
183	Tabla 4
184	Tabla 5
185	REV Kick 2
186	REV Kick 3
187	REV SN 5
188	REV SN 6
189	REV SN 7
190	REV SN 8

No.	Name
191	REV SN 9
192	REV Brush 1
193	REV Brush 2
194	REV Brush 3
195	REV Syn Hat1
196	REV Syn Hat2
197	REV China
198	REV Tom 2
199	REV Tom 3
200	REV Tom 4
201	REV Cuica Hi
202	REV Cuica Lo
203	REV 808Cow
204	REV Claves
205	REV W.Block
206	REV F.Snap
207	REV Scratch 1
208	REV Scratch 2
209	REV Table 1
210	REV Table 2
211	REV Table 3
212	REV Table 4
213	REV Table 5
214	REV Gong
215	REV Ride
216	REV O.Hit
217	REV Kong
218	REV Timpani
219	Jazz Set
220	House Set
221	Cymbal Set
222	Parc Set
223	Snare Set
224	Tomtom

PATCH LIST

No.	Name
001	770 Grand 1
002	MIDI 3 Grand
003	E.Grand 1
004	60s E.Piano
005	Dyne Rhodes
006	Pop Rhodes
007	BeautyRhodes
008	Airies Piano
009	Clav 1 x4
010	Wah Clav
011	Housey Clavy
012	Ballad Org.1
013	Even Bars 1
014	Stereo Organ
015	Jazz Organ 3
016	8ft. Stop
017	Brite Org.1
018	Soft Organ
019	80s Organ x4
020	Pipe Organ 4
021	Church
022	Celeste
023	Toy Piano
024	Snow Bells

No.	Name
025	Ac.Bass 1
026	Ac.Bass 2
027	Ac.Fretless
028	Fretless 2
029	Weather Bass
030	Jazz Bass
031	P. Bass
032	P.Funk V-Sw
033	Stick
034	DelicateStik
035	Stick V-Sw
036	Bassic House
037	Noo Spritbass
038	Metal Bass
039	Sync Bass
040	Bs Slide
041	Bs Harmonix
042	Super Nylon
043	Jazz Guitar
044	Jazz Cascade
045	Jazzy Scat
046	Pedal Steel
047	Banjo 1
048	E Sitar

No.	Name
049	Funk Gtr
050	Heavy Duty
051	Lead Gt 1
052	Lead Gt 2
053	Lead Gt 3
054	PocketRocket
055	Power Flange
056	Bowed Guitar
057	Shakupeace
058	Cimbalom 1
059	Sanza 1
060	Shamisen
061	Praying Monk
062	Electric Koto
063	Ravi Sitar
064	Mystic Mount
065	Velio String2
066	Virtuoso Vln
067	Virtuoso Vcl
068	Contra Bass
069	ChambrStrngs
070	Wacky Strngs
071	New Strings
072	Octave Hit 1

No.	Name
073	Jazzy Flute
074	ChamberWinds
075	Clarinet
076	Oboe
077	Bassoon
078	Tuba
079	ChamberWoods
080	HighSchool
081	Soprano Sax
082	Turbo Alto
083	Turbo Tenor
084	Baritone Sax
085	Multi Sax 1
086	Multi Sax 2
087	Sax Sect.mf
088	Sax Sect.mp
089	Trumpet V-Sw
090	Trumpets x2
091	BigBandBrass
092	New Brass 1
093	Trombones
094	Flugel Horn
095	St.LoBrass 1
096	Noble Horns

No.	Name
097	Harmonica Sw
098	Accordion 1
099	Accordion 2
100	Blade Runner
101	Mondo Chord1
102	Bell VOX 1
103	Mondo Chord 2
104	Ethnic Drums
105	Gliadiators
106	Enniuumil
107	Vaseline 1
108	Multiswept
109	7th Sand
110	Gabs Pad 1
111	Vibe Pad
112	JV Vektors
113	Digi Compi
114	Ear Candy
115	Massive Voxx
116	Distant Pipe
117	Wind Bell 1
118	Pan Sandwich
119	Ethereal Key
120	Belly Glock

No.	Name
121	Watery Pipa
122	Starry Night
123	Tin Be Tree
124	Oriallaris
125	Classic Lead
126	Solo MonoFXM
127	GR Lead
128	Cubic Lead
129	Analog Brs 1
130	Analog Brs 2
131	Brass Pad
132	SyntheticBRS
133	Poly Synth
134	SYNBRAXUN
135	Pad It!
136	Deja Vu
137	TransPonder
138	Hedees Hiway
139	Galactica
140	ImperialSwrd
141	Steel Works
142	House Drums
143	Jazz Drums
144	Snare Set
145	Tom Tom

Roland®

10446

UPC 10446



10981

Roland®