

Roland

CD-2i SD/CD RECORDER

High-Quality Recording Direct to Disc



Record Listen Burn CDs

Effortless CD Burning and more!



CD-2i SD/CD RECORDER



* 32 GB Card not supported



Record

With the CD-2i, everything is self-contained. Recording is fast, friendly, and super convenient.


STEP 1 Select the media to be used for recording.

Press the [CD] button or [SD CARD].




STEP 2 Adjust the input level of the internal mics.

Set the [MIC LEVEL] switch to the MANUAL position and turn the [MIC] knob to adjust the input level of the internal mics.

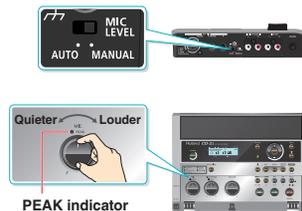

STEP 3 Let's start recording!

Press the [RECORD] button to enter record-standby mode. Press the [PLAY] button to begin recording.

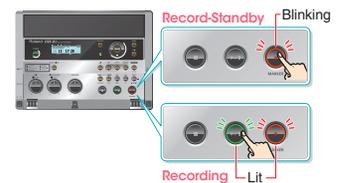

Transfer and archive your favorite records to CDs

The CD-2i is equipped with a phono-equalizer and can be connected to a record player directly. You can transfer your favorite records to CDs with ease, preserving them for generations to come.



Connecting an External Mic

The CD-2i supports condenser mics that require phantom power (DC48V, 10 mA Max).

* The included AC adaptor is required if you're using phantom power.





Listen

Helpful features for musical training.



More than just a great recorder, the CD-2i has useful functions for music students. You can loop specific sections of audio for repetitive study. You can change key and tempo; decrease the tempo, for example, without changing pitch to learn tricky sections of songs.

KEY	Adjusts the key (pitch) of playback in semitone steps.
PITCH	Adjusts the pitch of playback in one-cent steps. You can adjust the CD playback pitch to perfectly match your instrument.
SPEED	Without altering the pitch, the playback speed can be changed. TAPE MODE Changing the playback speed will affect the pitch, just as it would for tape playback. If you're trying to hear how words are being pronounced.
CENTER CANCEL	This function cancels the portion of the sound in the center of the stereo image, such as the lead vocal or guitar, making it less audible.
A-B Repeat	Only a selected part of the song is played back. It's convenient when you're practicing your instrument along with songs, or learning languages.

* The Center Cancel function cannot completely erase the vocals or guitar solos.



Burn CDs


It's easy to burn CDs!

The CD-2i simplifies the process without sacrificing quality.

STEP 1

Select the Menu

Press the [MENU] button to access the menu screen, and choose "Write (SD→CD) ?"

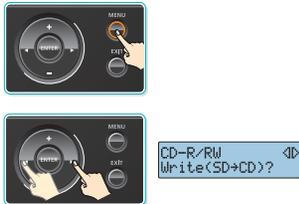

STEP 2

Insert a CD-R/RW Disc

Insert a CD-R/RW Disc
Insert a blank CD-R/RW disc to burn your music onto.



STEP 3

Select Songs

 
Select songs that you want to burn to CD and follow the simple onscreen instructions. Your CD is done!



A music disc is finalized.


EASY GUIDE

Easy Guide is a convenient function that lets you operate the CD-2i simply by following the onscreen instructions. No owner's manual required!



Rehearsal function sets the perfect levels for your recording

 Since the CD-2i can automatically adjust the input level using its Rehearsal function, anyone can make high-quality recordings.



EASY GUIDE Menu List

1. Recording	Record a vocal or instrumental performance to either an SD memory card or a CD-R/RW disc.
2. Erase	Erase a track on either an SD memory card or a CD-RW disc.
3. Write (SD→CD)	Create a music CD by writing tracks from an SD memory card to a CD-R/RW disc.
4. CD Backup	Make a backup of your original-music CD.
5. Karaoke	While playing back a music CD you can add your own vocal, and record the combined result onto an SD memory card.
6. Overdub	While playing back a previously recorded performance from an SD memory card, you can layer (overdub) another vocal or instrumental performance and record the combined result to a new track.
7. Rehearsal	Automatically sets the optimal input level while you rehearse your performance.

Slim and lightweight body

The CD-2i weighs only 1.3 kg (2lbs 13 oz.) and comes in a slim enclosure that's a mere 5cm (2 inches) thick. It's stylish and functional — position it anywhere you like.



Supports AC and battery power

Power the CD-2i from an AC adaptor or batteries. Take it anywhere!



* For performing CD-related operations such as recording, playing, or writing songs, use the included AC adaptor.

Useful features

The CD-2i comes with a compact wireless remote control. You can perform recording operations without moving away from your instrument.



Music-Practice Partner

The built-in Tuner and Metronome functions are useful for practice and performance.



Tuner Function Screen

TOP PANEL

Stereo Speakers

EASY GUIDE Button

Input level / Volume Knob

SD Card Slot

Stereo Microphones

Metronome Button & Play Mode Buttons

CD Tray

SD/CD Operation Buttons



REAR PANEL

External Mic Jacks (L(MONO)/R)



Stereo Mics

Line/Phono In Jacks (L/R)



Digital Piano

Audio System

Record Player



External Mic Jack (XLR)



Dynamic Mic



Condenser Mic

Line Out Jacks (L/R)



Powered Speakers

Headphone Jack



Headphones

CD-2i SPECIFICATIONS

Recorder Part																																													
Tracks	2 (Stereo)																																												
Sampling Rate	44.1 kHz																																												
Signal Processing	AD/DA conversion: 24 bits																																												
Recording Mode	SD Memory Card: WAV (44.1 kHz, 16 bits) CD-R, CD-RW: Audio CD																																												
Recording Media	SD Memory Card (supports 64 MB to 16 GB, SDHC format compatible) *32 GB Card not supported, CD-R, CD-RW																																												
Recording Time	<table border="1"> <thead> <tr> <th colspan="2">CD-R or CD-RW disc</th> <th colspan="2">SD Memory Card</th> </tr> <tr> <th>Disc Capacity</th> <th>Recording Time</th> <th>Card Capacity</th> <th>Recording Time</th> </tr> </thead> <tbody> <tr> <td>650 MB</td> <td>74 min</td> <td>64 MB</td> <td>5 min</td> </tr> <tr> <td>700 MB</td> <td>80 min</td> <td>128 MB</td> <td>11 min</td> </tr> <tr> <td></td> <td></td> <td>256 MB</td> <td>23 min</td> </tr> <tr> <td></td> <td></td> <td>512 MB</td> <td>47 min</td> </tr> <tr> <td></td> <td></td> <td>1 GB</td> <td>94 min</td> </tr> <tr> <td></td> <td></td> <td>2 GB</td> <td>189 min</td> </tr> <tr> <td></td> <td></td> <td>4 GB</td> <td>377 min</td> </tr> <tr> <td></td> <td></td> <td>8 GB</td> <td>755 min</td> </tr> <tr> <td></td> <td></td> <td>16 GB</td> <td>1511 min</td> </tr> </tbody> </table>	CD-R or CD-RW disc		SD Memory Card		Disc Capacity	Recording Time	Card Capacity	Recording Time	650 MB	74 min	64 MB	5 min	700 MB	80 min	128 MB	11 min			256 MB	23 min			512 MB	47 min			1 GB	94 min			2 GB	189 min			4 GB	377 min			8 GB	755 min			16 GB	1511 min
	CD-R or CD-RW disc		SD Memory Card																																										
Disc Capacity	Recording Time	Card Capacity	Recording Time																																										
650 MB	74 min	64 MB	5 min																																										
700 MB	80 min	128 MB	11 min																																										
		256 MB	23 min																																										
		512 MB	47 min																																										
		1 GB	94 min																																										
		2 GB	189 min																																										
		4 GB	377 min																																										
		8 GB	755 min																																										
		16 GB	1511 min																																										
	* Each recording time is an approximate estimate including some errors. * In case that there are plural files, the sum of recording time would be shorter. * Maximum recording time of one song is 74 minutes.																																												
Recording Songs	Up to 99 songs on a single SD Memory Card, CD-R, or CD-RW																																												

Input/Output	
Audio Input	Internal Stereo Microphones EXT MIC (L/MONO, R) Jacks: 1/4 inch phone type EXT MIC (MONO) Jack: XLR type (phantom power: DC 48 V, 10 mA Max) LINE/PHONO (L, R) Jacks: RCA phono type
Audio Output	Internal Stereo Speakers LINE OUT Jacks: RCA phono type PHONES Jack: Stereo miniature phone type
Frequency Response	20 Hz to 20 kHz (+0dB/-2dB)
Nominal Input Level (variable)	EXT MIC (L/MONO, R) Jacks: -51 to -14 dBu EXT MIC (MONO) Jack: -51 to -14 dBu LINE/PHONO (L, R) Jacks: -24 to 0 dBu (LINE) / -55 to -30 dBu (PHONO)
Nominal Output Level	LINE OUT Jacks: -10 dBu
Input Impedance	EXT MIC (L/MONO, R) Jacks: 20 k ohms EXT MIC (MONO) Jack: 10 k ohms LINE/PHONO (L, R) Jacks: 9 k ohms (LINE) / 50 k ohms (PHONO)
Output Impedance	LINE OUT Jacks: 1 k ohms, PHONES Jack: 32 ohms

Other	
Display	16 characters, two lines (backlit LCD)
Dimensions	mm: 275.3 (W) x 195.9 (D) x 49.8 (H) inches: 10-7/8 (W) x 7-3/4 (D) x 2 (H)
Weight	1.27 kg / 2 lbs. 13 oz.
Power Supply	AC Adaptor, AA type Alkaline dry battery (LR6) x 6 or Nickel-metal hydride battery (HR15/51) x 6
Current Draw	800 mA
Expected battery life under continuous use	Alkaline dry batteries: approximately 5 hours Nickel-metal hydride batteries: approximately 6 hours * The time may vary according to usage conditions, batteries used, and type of SD memory card used.
Accessories	Owner's Manual, Quick Start, Remote Controller (with Battery CR2025), AC Adaptor, Power Cord (for AC Adaptor), SD Memory Card, CD-R Disc (Blank media), SD Card Protector

(0 dBu = 0.775 V rms)

*Recording, duplication, distribution, sale, lease, performance, or broadcast of copyrighted material (musical works, visual works, broadcasts, live performances, etc.) belonging to a third party in part or in whole without the permission of the copyright owner is forbidden by law.

Options



Carrying Case
CB-CD2E



Stereo Microphone
CS-15R



Stereo Headphones
RH-300



Support Stand
SS-PC1

