


# To Users of the OCTAPAD SPD-30

## Concerning the Sensitivity Settings for the Pads

The sensitivity of the pads on the OCTAPAD can change depending on the environment in which you use them and temperature changes. The OCTAPAD allows you to set the sensitivity of the pads on an individual basis. Use the procedure below to set the sensitivity to the desired value. For details on how to set the sensitivity for the internal pads, refer to "Internal Pads Settings" on p. 59 in the Owner's Manual.

1. Choose MENU → PAD → INTERNAL (p. 16).  
The PAD SETTING-INTERNAL screen appears.
2. Hit a pad to select the pad whose settings you want to edit.
3. Turn [Knob 1] (SEL) to select "Sensitivity."
4. Turn [Knob 3] (-/+ ) to edit the value.

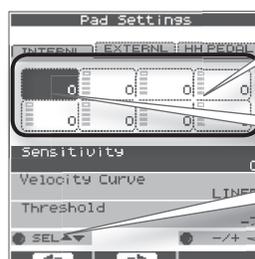

Trigger meter.  
This indicates the velocity value.

Hit a pad to select the pad whose settings you want to edit.

[Knob 1] (SEL) selects a parameter.

[Knob 3] (-/+) edits the value.

## Concerning the Saving of Data

Ordinarily, the OCTAPAD saves your data automatically each time you turn off its power. However, you may want to periodically carry out a manual save to internal memory of all your current settings so as to prevent the loss of data in the unlikely event that there is a power outage or other problem. To do so, use the "Force Save Data" command. For more information on "Force Save Data," refer to p. 17 in the Owner's Manual.

## About the MIDI Note Numbers that the Internal Pads Transmit

The MIDI note numbers transmitted by the pads can be specified individually for Inst A and Inst B (p. 63 in the Owner's Manual).

The note numbers for Inst A or Inst B will be transmitted depending on the settings for "Inst Layer Type" and "Inst Layer Point" for each pad. For information on Inst Layer, refer to p. 30 in the Owner's Manual.

## Errata

Please make the following corrections in your "OCTAPAD SPD-30 Owner's Manual."

Page	Corrections	Incorrect	Correct
p. 40	MEMO	The FX-SEND screen parameters can not be copied/pasted. That is why there is no QUICK MENU access in this screen.	SEND Screen QUICK MENU <b>All...</b> (The values for the currently selected pad will be copied to all pads.)
p. 44	STANDBY Screen QUICK MENU	* The menu item at right has been added.	<b>Favorite ON/OFF</b> (When ON, Kit selections for phrase loop will involve Favorites.)
p. 47	Erasing a Track (ERASE)	Pressing [Button 1] (CANCEL) will cancel all of the erase start points, and recover the data.	Press [Button 1] (CANCEL) to cancel the erasure operation.
p. 53	Foot Sw 1, Foot Sw 2	* The setting at right has been added.	<b>START/STOP</b> (Allows you to start or stop Phrase Loop.)
p. 54	Ext Pad 1-4		
p. 59	Value of "Threshold"	-9-+9	-2-+9
p. 66	Value of "BANK"	BK00-BK99	OFF, BK00-BK99
p. 66	Value of "Knob1 CC# (Speed), Knob2 CC# (Color), Knob3 CC# (Fade)"	OFF, 1-95	OFF, 1-5, 7-31, 64-95

Copyright © 2010 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

Roland is a registered trademark of Roland Corporation in the United States and/or other countries.

The Phrase Loops contained in this product are sound recordings protected by copyright.

# OCTAPAD SPD-30 をお使いのお客様へ

## 各パッドの感度設定について

OCTAPAD の各パッドの感度は、お使いの環境、温度変化により変わる場合があります。OCTAPAD は各パッドごとに感度 (Sensitivity) の設定をすることができますので、以下の手順で Sensitivity をお好みの値に調整してください。内蔵パッドの感度設定について詳しくは、取扱説明書 P.59 をご覧ください。


### 1. MENU → PAD → INTERNAL を選びます (P.16)。

PAD SETTING-INTERNAL 画面が表示されます。

### 2. パッドを叩いて設定を変更するパッドを選択します。

### 3. [つまみ 1] (SEL) を回して「Sensitivity」を選びます。

### 4. [つまみ 3] (−/+ ) を回して値を変更します。

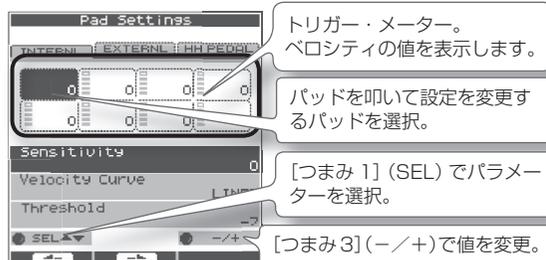

トリガー・メーター。  
ベロシティの値を表示します。

パッドを叩いて設定を変更するパッドを選択。

[つまみ 1] (SEL) でパラメーターを選択。

[つまみ 3] (−/+ ) で値を変更。

## データの保存について

OCTAPAD は通常、電源オフ時にデータを自動保存します。万一の停電などに備え、「Force Save Data」を実行することで強制的に現在のデータを内蔵メモリーに保存することもできます。「Force Save Data」については、取扱説明書 P.17 をご覧ください。

## 内蔵パッドが送信するMIDIノート・ナンバーについて

各パッドが送信する MIDI ノート・ナンバーは、インスト A、インスト B それぞれに指定可能です (取扱説明書 P.63)。各パッドの「Inst Layer Type」と「Inst Layer Point」の設定にしたがって、インスト A、インスト B いずれかのノート・ナンバーが送信されます。インスト・レイヤーについては、取扱説明書 P.30 をご覧ください。

## 訂正

OCTAPAD SPD-30 取扱説明書の内容に誤りがありましたので、次のように訂正させていただきます。

ページ	訂正箇所	誤	正
P.40	メモ	FX-SEND 画面の内容はコピー/ペーストされません。そのため、FX-SEND 画面では QUICK MENU は表示されません。	SEND 画面の QUICK MENU <b>All..</b> (現在の選択されているパッドの値を全パッドにコピーします。)
P.44	STANDBY 画面の QUICK MENU	※右のメニュー項目が追加されます。	<b>Favorite ON/OFF</b> (ON にすると、フレーズ・ループでのキット選択がフェイバリットになります。)
P.47	トラックを消去する (ERASE)	[ボタン 1] (CANCEL) を押すと、すべての消去開始点をキャンセルして、データを復帰します。	[ボタン 1] (CANCEL) を押すと、消去動作を解除します。
P.53	Foot Sw 1、Foot Sw 2	※右の設定値が追加されます。	<b>START/STOP</b> (フレーズ・ループをスタート、ストップできます。)
P.54	Ext Pad 1 ~ 4		
P.59	『Threshold』の設定値	-9 ~ +9	-2 ~ +9
P.66	『BANK』の設定値	BK00 ~ BK99	OFF、BK00 ~ BK99
P.66	『Knob1 CC# (Speed)、Knob2 CC# (Color)、Knob3 CC# (Fade)』の設定値	OFF、1 ~ 95	OFF、1 ~ 5、7 ~ 31、64 ~ 95

