

Roland Sound Library

SR-JV80-03 PIANO EXPANSION

 Roland

Copyright © 1992 by ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form the permission of ROLAND CORPORATION.

本書の一部、もしくは全部を無断で複写・転載することを禁じます。

Thank you for purchasing the Roland Sound Library SR-JV80-03 "Piano Expansion."

This expansion board contains 73 different waveforms that reproduce various piano sound (acoustic piano, electric piano, clavi) and 111 different piano patches made by using waveforms stored in the expansion board and the instrument you use, and therefore can be used in a wide variety of music genres from classical to popular music.

Read the owner's manual carefully in order to fully enjoy utilizing the patches at live concerts and recordings, and to have fun creating sounds by combining the instrument you use and the expansion board waves.

■ INSTALLING THE EXPANSION BOARD

* Turn off the instrument you use.

1. Remove the cover located at the bottom or top of the instrument you use.
2. Rotate the board holders so that they align with the connector.
3. Mount the expansion board on the connector so that the three board holders project through the expansion board.
4. Affix the expansion board by using the attached tool to turn the board holders in the LOCK direction.
To remove the expansion board, turn the board holders in the UNLOCK direction and hook the board with the Provided tool.
Attach the cover.
5. Check if the expansion board is correctly attached.
If the "EXP" display is not selected (shown) in the Waveform Selection Screen (refer to the owner's manual of the instrument you use), remove the expansion board and attach it again properly.

このたびは、ローランド・サウンド・ライブラリー SR-JV80-03 「ピアノ・エクスペンション」をお買い上げいただきまして、まことにありがとうございます。


このエクスペンション・ボードには、各種ピアノ・サウンド(アコースティック・ピアノ、エレクトリック・ピアノ、クラビ)を再現した73種類のウェーブフォームと、エクスペンション・ボードおよび本体のウェーブフォームを使用して作られたピアノ・パッチが111種類記憶されており、クラシックからポップスまで幅広いジャンルでお使いいただけます。

お手持ちの機器の取扱説明書に従って記憶されているパッチをライブやレコーディングなどで利用したり、本体のウェーブフォームやエクスペンション・ボードのウェーブフォームを組み合わせた音作りなどを楽しくみてください。

■ エクスペンション・ボードの取り付けかた

* 使用機器の電源スイッチをオフにしてください。

1. 使用機器の底部、または上部にあるカバーをはずします。
2. 基板ホルダーを、図2のような向きに合わせます。
3. エクスペンション・ボードのコネクターを、本体のコネクターに完全に差し込みます。このとき3つの基板ホルダーが、エクスペンション・ボードから出るようにします。
4. 付属の固定用具で基板ホルダーをLOCK方向に回し、エクスペンション・ボードを固定します。
エクスペンション・ボードの取りはずしは、基板ホルダーをUNLOCK方向に回し、固定用具を引っ掛けて取りはずします。
最後にカバーを取り付けます。
5. エクスペンション・ボードの取り付けが正しく行なわれたかを確認します。
ウェーブフォームの選択画面(使用機器の取扱説明書参照)で"EXP"が選べない(表示されない)ときは、もう一度エクスペンション・ボードをつけ直してください。

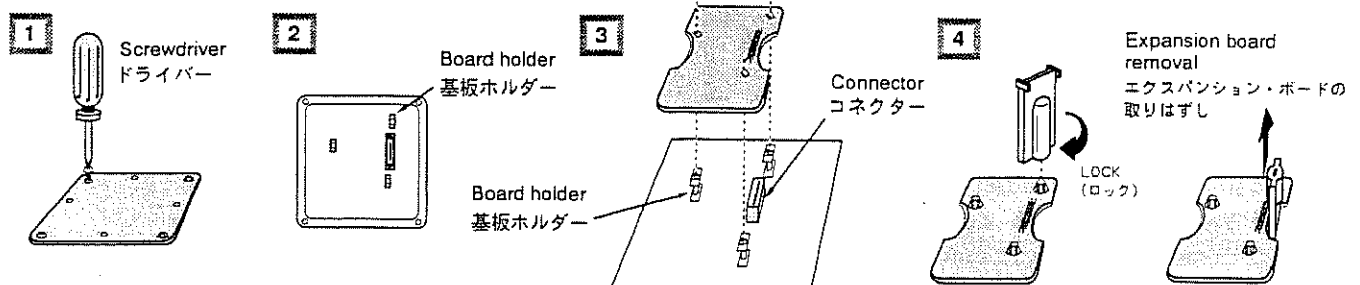

WAVE LIST

No.	Name
001	Grand sft 1A
002	Grand sft 1B
003	Grand sft 1C
004	Grand hrd 1A
005	Grand hrd 1B
006	Grand hrd 1C
007	EuroPiano pA
008	EuroPiano pB
009	EuroPiano pC
010	EuroPiano fA
011	EuroPiano fB
012	EuroPiano fC
013	Pop Piano 1
014	Pop Piano 1L
015	Pop Piano 1R

No.	Name
016	SAPiano p 1A
017	SAPiano p 1B
018	SAPiano p 1C
019	SAPiano f 1A
020	SAPiano f 1B
021	SAPiano f 1C
022	SAPiano 3
023	E.Grand BdyA
024	E.Grand BdyB
025	E.Grand BdyC
026	E.Grand 1A
027	E.Grand 1B
028	E.Grand 1C
029	E.Grand 2
030	Rhodes 1 p

No.	Name
031	Rhodes 1 f
032	Rhodes 2A
033	Rhodes 2B
034	Rhodes 2C
035	Rhodes 3A
036	Rhodes 3B
037	Rhodes 3C
038	Rhodes 4A p
039	Rhodes 4B p
040	Rhodes 4C p
041	Rhodes 4A f
042	Rhodes 4B f
043	Rhodes 4C f
044	Rhodes 5A p
045	Rhodes 5B p

No.	Name
046	Rhodes 5C p
047	Rhodes 5A f
048	Rhodes 5B f
049	Rhodes 5C f
050	Rhodes 6A p
051	Rhodes 6B p
052	Rhodes 6C p
053	Rhodes 6A f
054	Rhodes 6B f
055	Rhodes 6C f
056	Wurly soft A
057	Wurly soft B
058	Wurly soft C
059	Wurly hard A
060	Wurly hard B

No.	Name
061	Wurly hard C
062	E.Piano A
063	E.Piano B
064	E.Piano C
065	Clav 2A
066	Clav 2B
067	Clav 2C
068	Clav 3A
069	Clav 3B
070	Clav 3C
071	Clav 4A
072	Clav 4B
073	Clav 4C

PATCH LIST

No.	Name
001(A11)	Grand Piano1
002(A12)	Sl.Grand Pno
003(A13)	Grand Piano2
004(A14)	Grand Piano3
005(A15)	Brite Grand
006(A16)	Full Grand
007(A17)	Grand Piano4
008(A18)	ClasciPiano1
009(A21)	ClasciPiano2
010(A22)	ClasciPiano3
011(A23)	Grandioso
012(A24)	Euro Piano
013(A25)	Rich Piano
014(A26)	Pop Piano 1
015(A27)	Pop Piano 2
016(A28)	Pop Piano 3
017(A31)	Pop Piano 4
018(A32)	Pop Piano 5
019(A33)	RD A.Piano1A
020(A34)	RD A.Piano1B
021(A35)	SA Piano 1
022(A36)	SA Piano 2
023(A37)	E J Piano
024(A38)	FlinStoneway

No.	Name
025(A41)	RD A.Piano3A
026(A42)	RD A.Piano3B
027(A43)	RD A.Piano3C
028(A44)	Sml E.Grand
029(A45)	E.Grand 1
030(A46)	E.Grand 2
031(A47)	E.Grand 3
032(A48)	Roadcase Pno
033(A51)	E.Grand 4
034(A52)	Whirly Piano
035(A53)	Whirly Road
036(A54)	Wurly Trem
037(A55)	60s Rhodes
038(A56)	ClassicSound
039(A57)	Dyno Oz!
040(A58)	Dyno Phaze
041(A61)	Rhodes 66
042(A62)	Suitcase Pno
043(A63)	Mr Fusion
044(A64)	Sensitivity
045(A65)	Rhodes B66
046(A66)	DynoRhodes 1
047(A67)	DynoRhodes 2
048(A68)	Bluesy 1

No.	Name
049(A71)	DynoRhodes 3
050(A72)	Tiny Rhodes
051(A73)	Bluesy 2
052(A74)	BalladRhodes
053(A75)	RD Rhodes 1
054(A76)	Blend
055(A77)	DynoRhodes 4
056(A78)	RD Rhodes Tr
057(A81)	Pop Rhodes 1
058(A82)	BeautyRhodes
059(A83)	Little X
060(A84)	Pop Rhodes 2
061(A85)	Pop Rhodes 3
062(A86)	Rhodes X
063(A87)	BellRhodes 1
064(A88)	BellRhodes 2
065(B11)	Schmaltz Pno
066(B12)	Combi Piano
067(B13)	MidiElecGmd
068(B14)	Piano Pad
069(B15)	Concerto
070(B16)	Bells Piano1
071(B17)	Vox Piano 1
072(B18)	Vox Piano 2

No.	Name
073(B21)	Piano w/Brs
074(B22)	Wispy Piano1
075(B23)	Voiquey
076(B24)	Vox Piano 3
077(B25)	Windy Piano
078(B26)	Wispy Piano2
079(B27)	E.P w/Vox
080(B28)	Piano Stack
081(B31)	Bells Piano2
082(B32)	Wah Clav
083(B33)	Housey Clavy
084(B34)	Klavdom 1
085(B35)	Klavdom 2
086(B36)	Velo Clav
087(B37)	Clavidoo
088(B38)	Funkee Whirl
089(B41)	Morning Mist
090(B42)	Chaos Pad
091(B43)	Clavi Lead
092(B44)	Funky Lead
093(B45)	Eclipse
094(B46)	CadenzPiano
095(B47)	Grand Pno 1T
096(B48)	ClasciPno 1T

No.	Name
097(B51)	Pop Piano 1T
098(B52)	RD A.Piano1T
099(B53)	E.Grand 1T
100(B54)	RD Piano3 1T
101(B55)	Rhodes 1T
102(B56)	Suitcase 1T
103(B57)	RD Rhodes 1T
104(B58)	Little X 1T
105(B61)	Velo Clav 1T
106(B62)	Klavdom 1T
107(B63)	Clav 1 1T
108(B64)	Clav 2 1T
109(B65)	Clav 3 1T
110(B66)	Clav 4 1T
111(B67)	Clavi Lead1T

■ Note

- When you use the Waveforms / Patches stored on the expansion board with the instrument other than the JV Series, those Waveforms / Patches may sound slightly different from those used with an JV unit.
For a detailed explanation about this, read the owner's manual of the instrument you use.
- To use Patch data stored in the expansion board, load the relevant Patch data according to the owner's manual of the instrument you use.

■ ご注意

- JV シリーズ以外の機器でエクспанション・ボードのウェーブフォーム/パッチを使用したときは、JV シリーズで使用したときの音色と多少異なる場合があります。
詳しくは、使用機器の取扱説明書をご覧ください。
- エクспанション・ボードのパッチ・データを使う場合は、使用機器の取扱説明書に従って、パッチ・データのロードを実行してください。

Roland®

10448

UPC

10448



10981

Roland®